

ORDERING SPARE PARTS

When ordering spare parts, the spring clip seal housing can be used as an exact replacement for the screw secured one in an RD03 while for the RD56 and RD57 the cylinder caps have been changed to accommodate the new seal housing. The difference is easily identifiable. Old style RD56 and RD57 cylinder caps have O-ring grooves in the journal while the new ones don't (see figure below).



The following trouble shooting guide can be used to identify what replacement parts to order in your situation.

Problem	Solution
A seal housing is required for an RD03.	Only the spring clip seal housing is now made for this model You need to order the following parts: Kit part no - ARBRD03UPGRADE
You have an RD56, or RD57 WITHOUT O-ring grooves in the journal that only requires a seal housing.	You must order the following parts: Kit part no - ARBRD56UPGRADE1
You have a RD56, or RD57 WITH O-ring grooves in the journal that requires a new cylinder cap or seal housing (or both)	Only the new cylinder caps WITHOUT O-ring grooves in the journal are now made for these models. So you will need to order a spring clip seal housing as well. NOTE: the new and old cylinder caps are interchangeable. Order the following parts: RD56 Kit part no - ARBRD56UPGRADE2 RD57 Kit part no - ARBRD57UPGRADE

NOTE: you must remove and discard the clamping plate from behind the adjuster nut.