



WILDBEAR

From  **Bearmach**
LAND ROVER PARTS

Fitting Instructions BA 7609 Salisbury Diff Guard

1. Park the vehicle on level ground and chock the road wheels
2. Using a suitable receptacle drain the oil from the axle (alternatively catch any oil that leaks from the joint when the retaining bolts are removed.
3. Remove the five diff pan fixing bolts that correspond to those on the diff guard
4. Hold the spacer plate supplied up in place and place the diff guard over this
5. Using the new bolts supplied fit the guard to the casing and tighten all firmly once all are in place
6. Top up the axle with oil as necessary



Bearmach
LAND ROVER PARTS

Parts and Accessories for all Land Rovers



Head office: Bearmach Limited, Bearmach House, Unit 8, Pantglas Industrial Estate, Bedwas, Caerphilly, CF83 8GE
Tel: +44 (0)29 20 856550 Fax: +44 (0)29 20 865586 Email: bearmach@bearmach.com Web: www.bearmach.com