


Auxiliary load wiring with relay.

Negative Earth vehicles only.

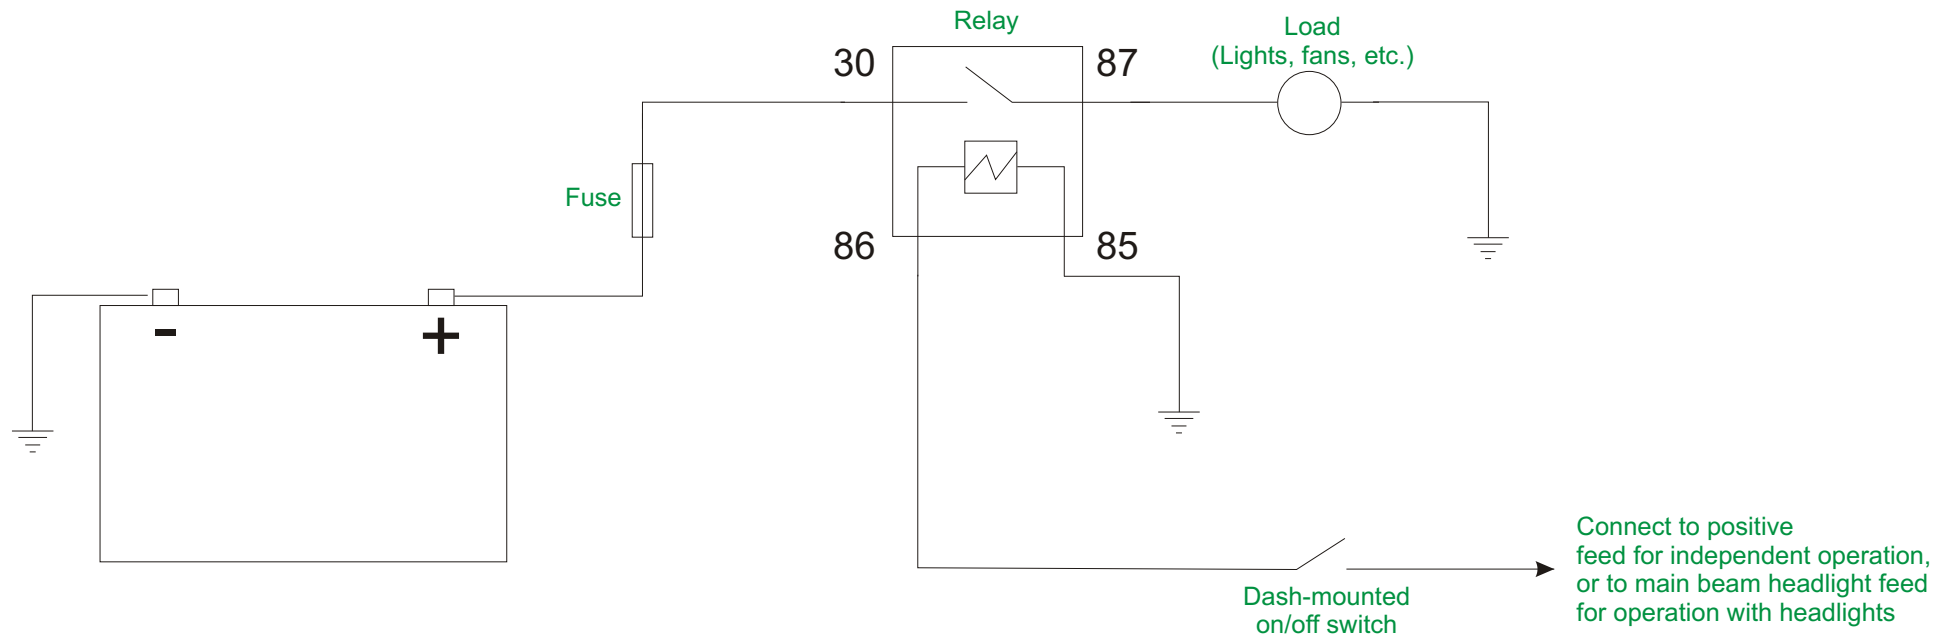

 © Copyright 2008 Devon 4x4 Centre All rights reserved. E.&O.E.	To calculate the required fuse / cable size, use the following formula to work out how much current your load will draw : Current (Amps) = Load (Watts) ÷ Voltage <i>(For example, for a pair of 55 Watt driving lights on a 12 Volt vehicle)</i> => Current = 110w ÷ 12v = 9.1 Amps In this case, 10 or 15 Amp cable with a 10 or 15 Amp fuse to match would be suitable.
--	--