
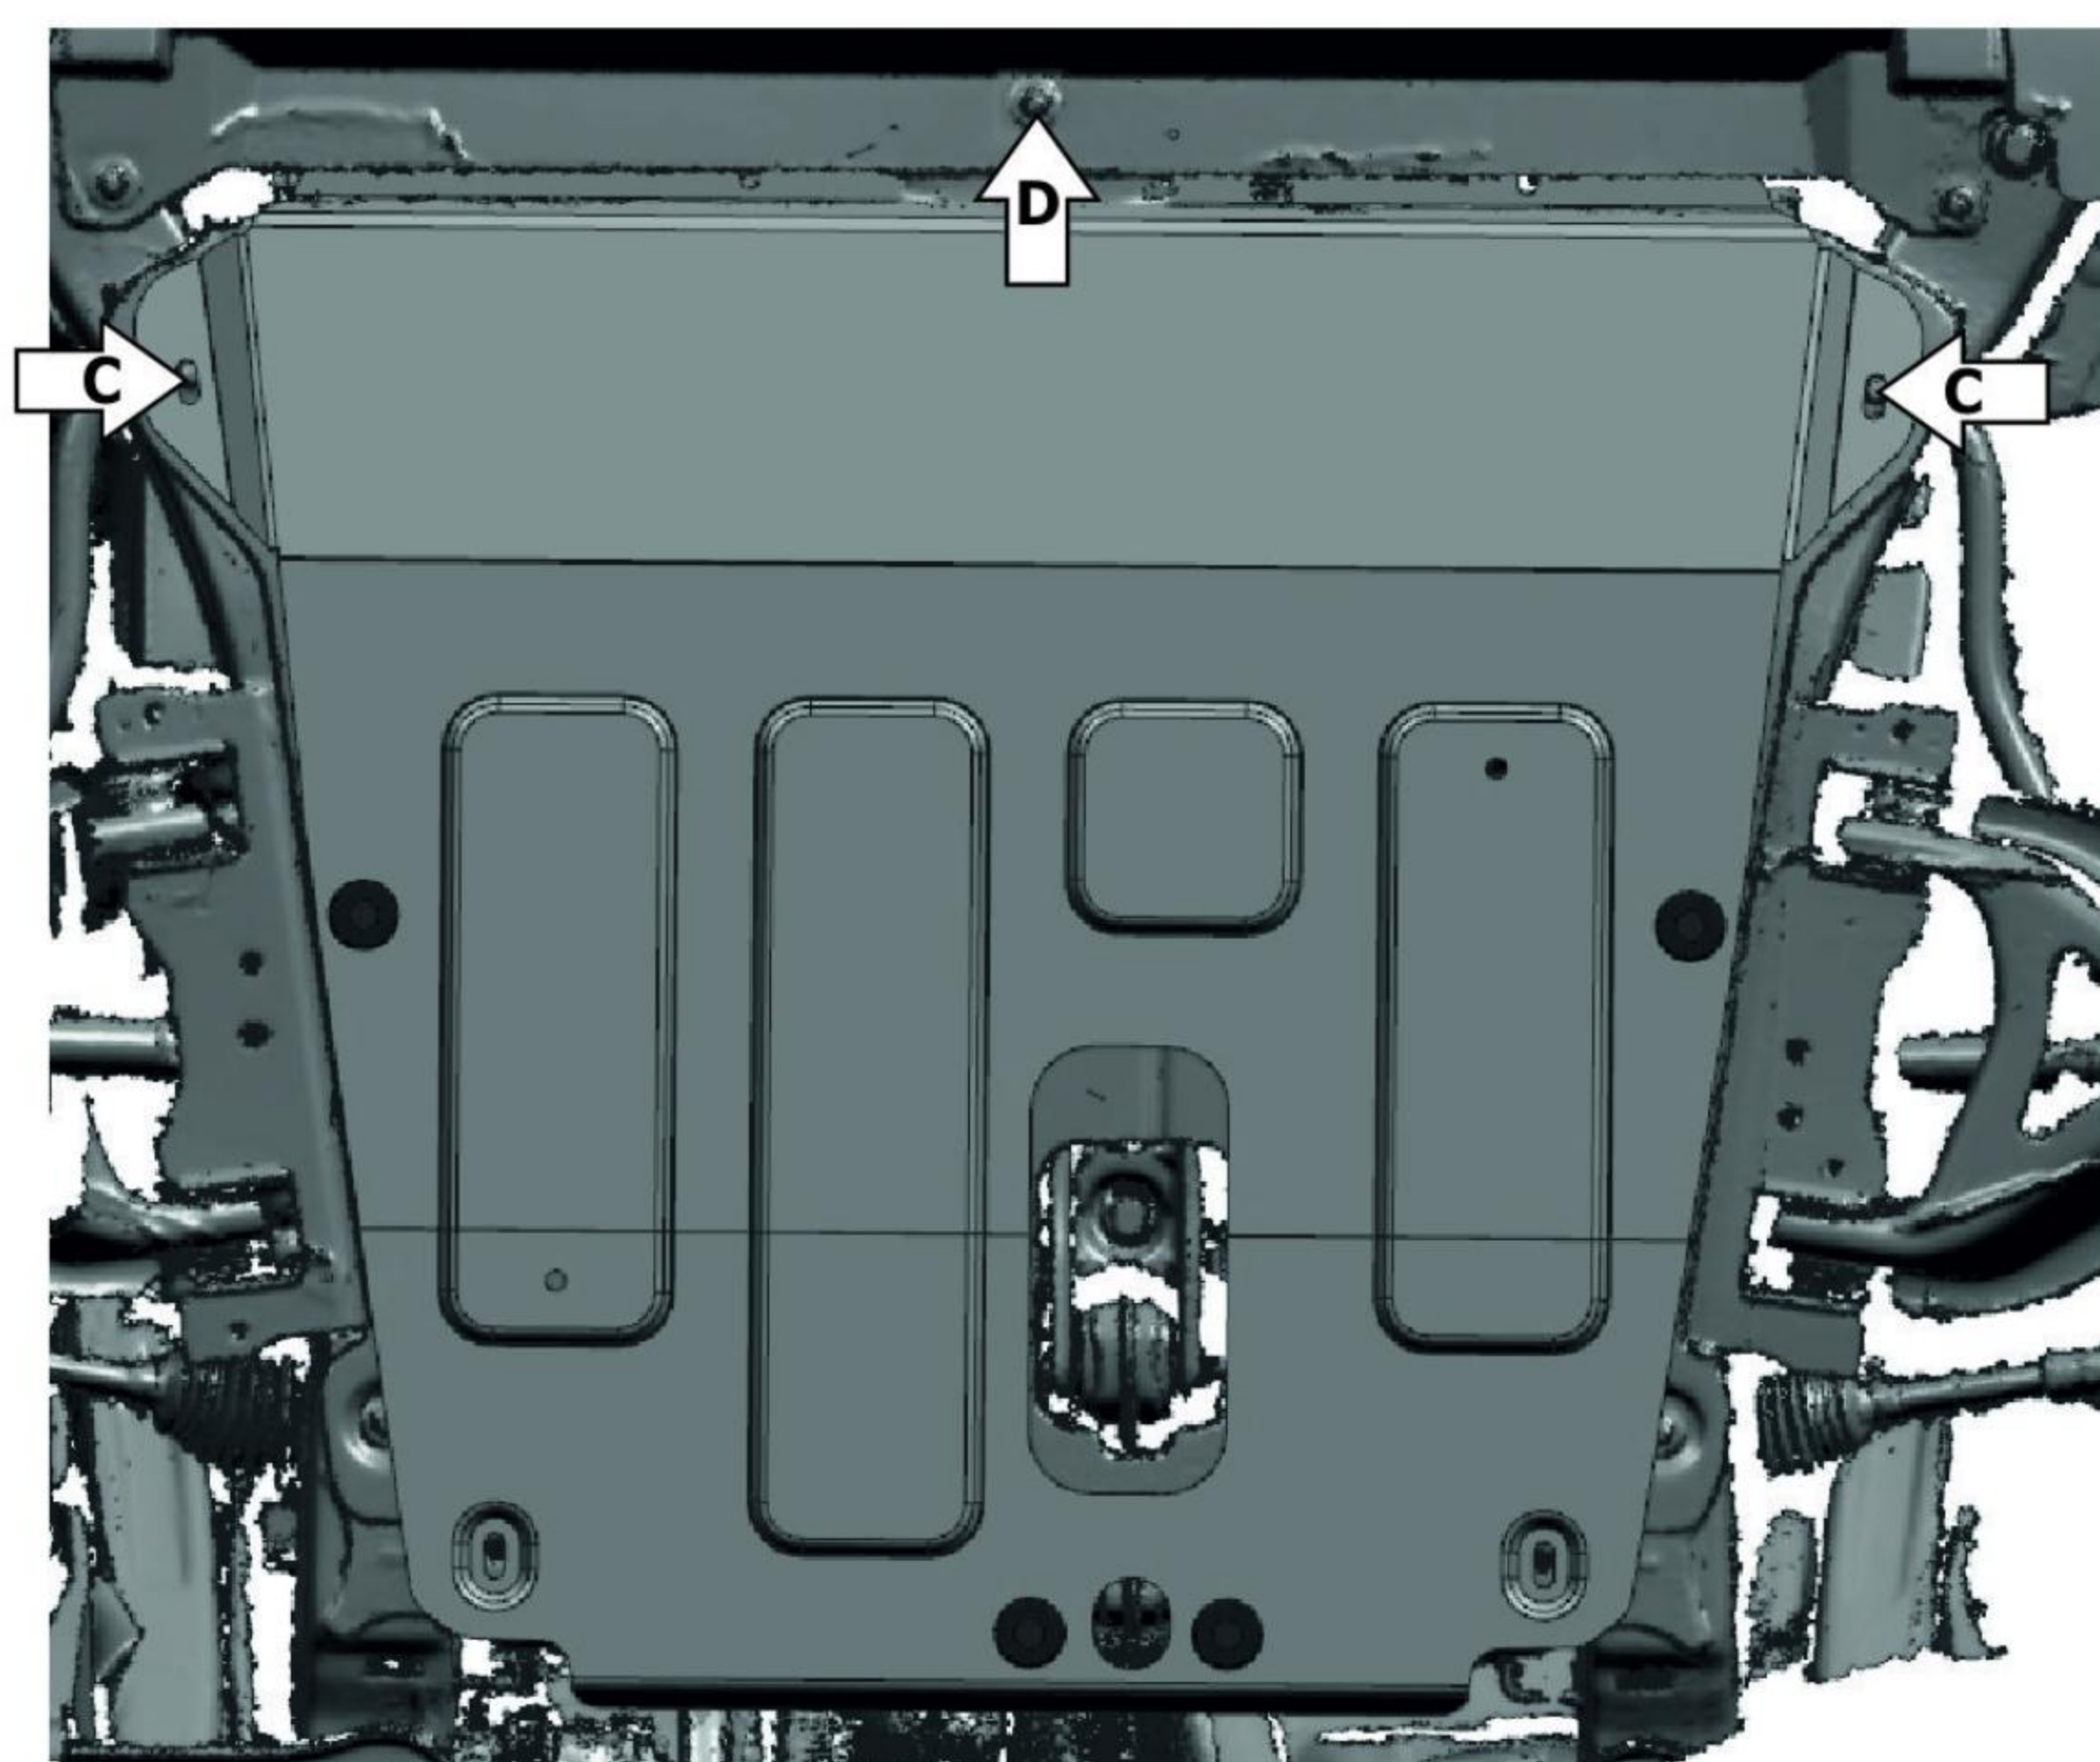
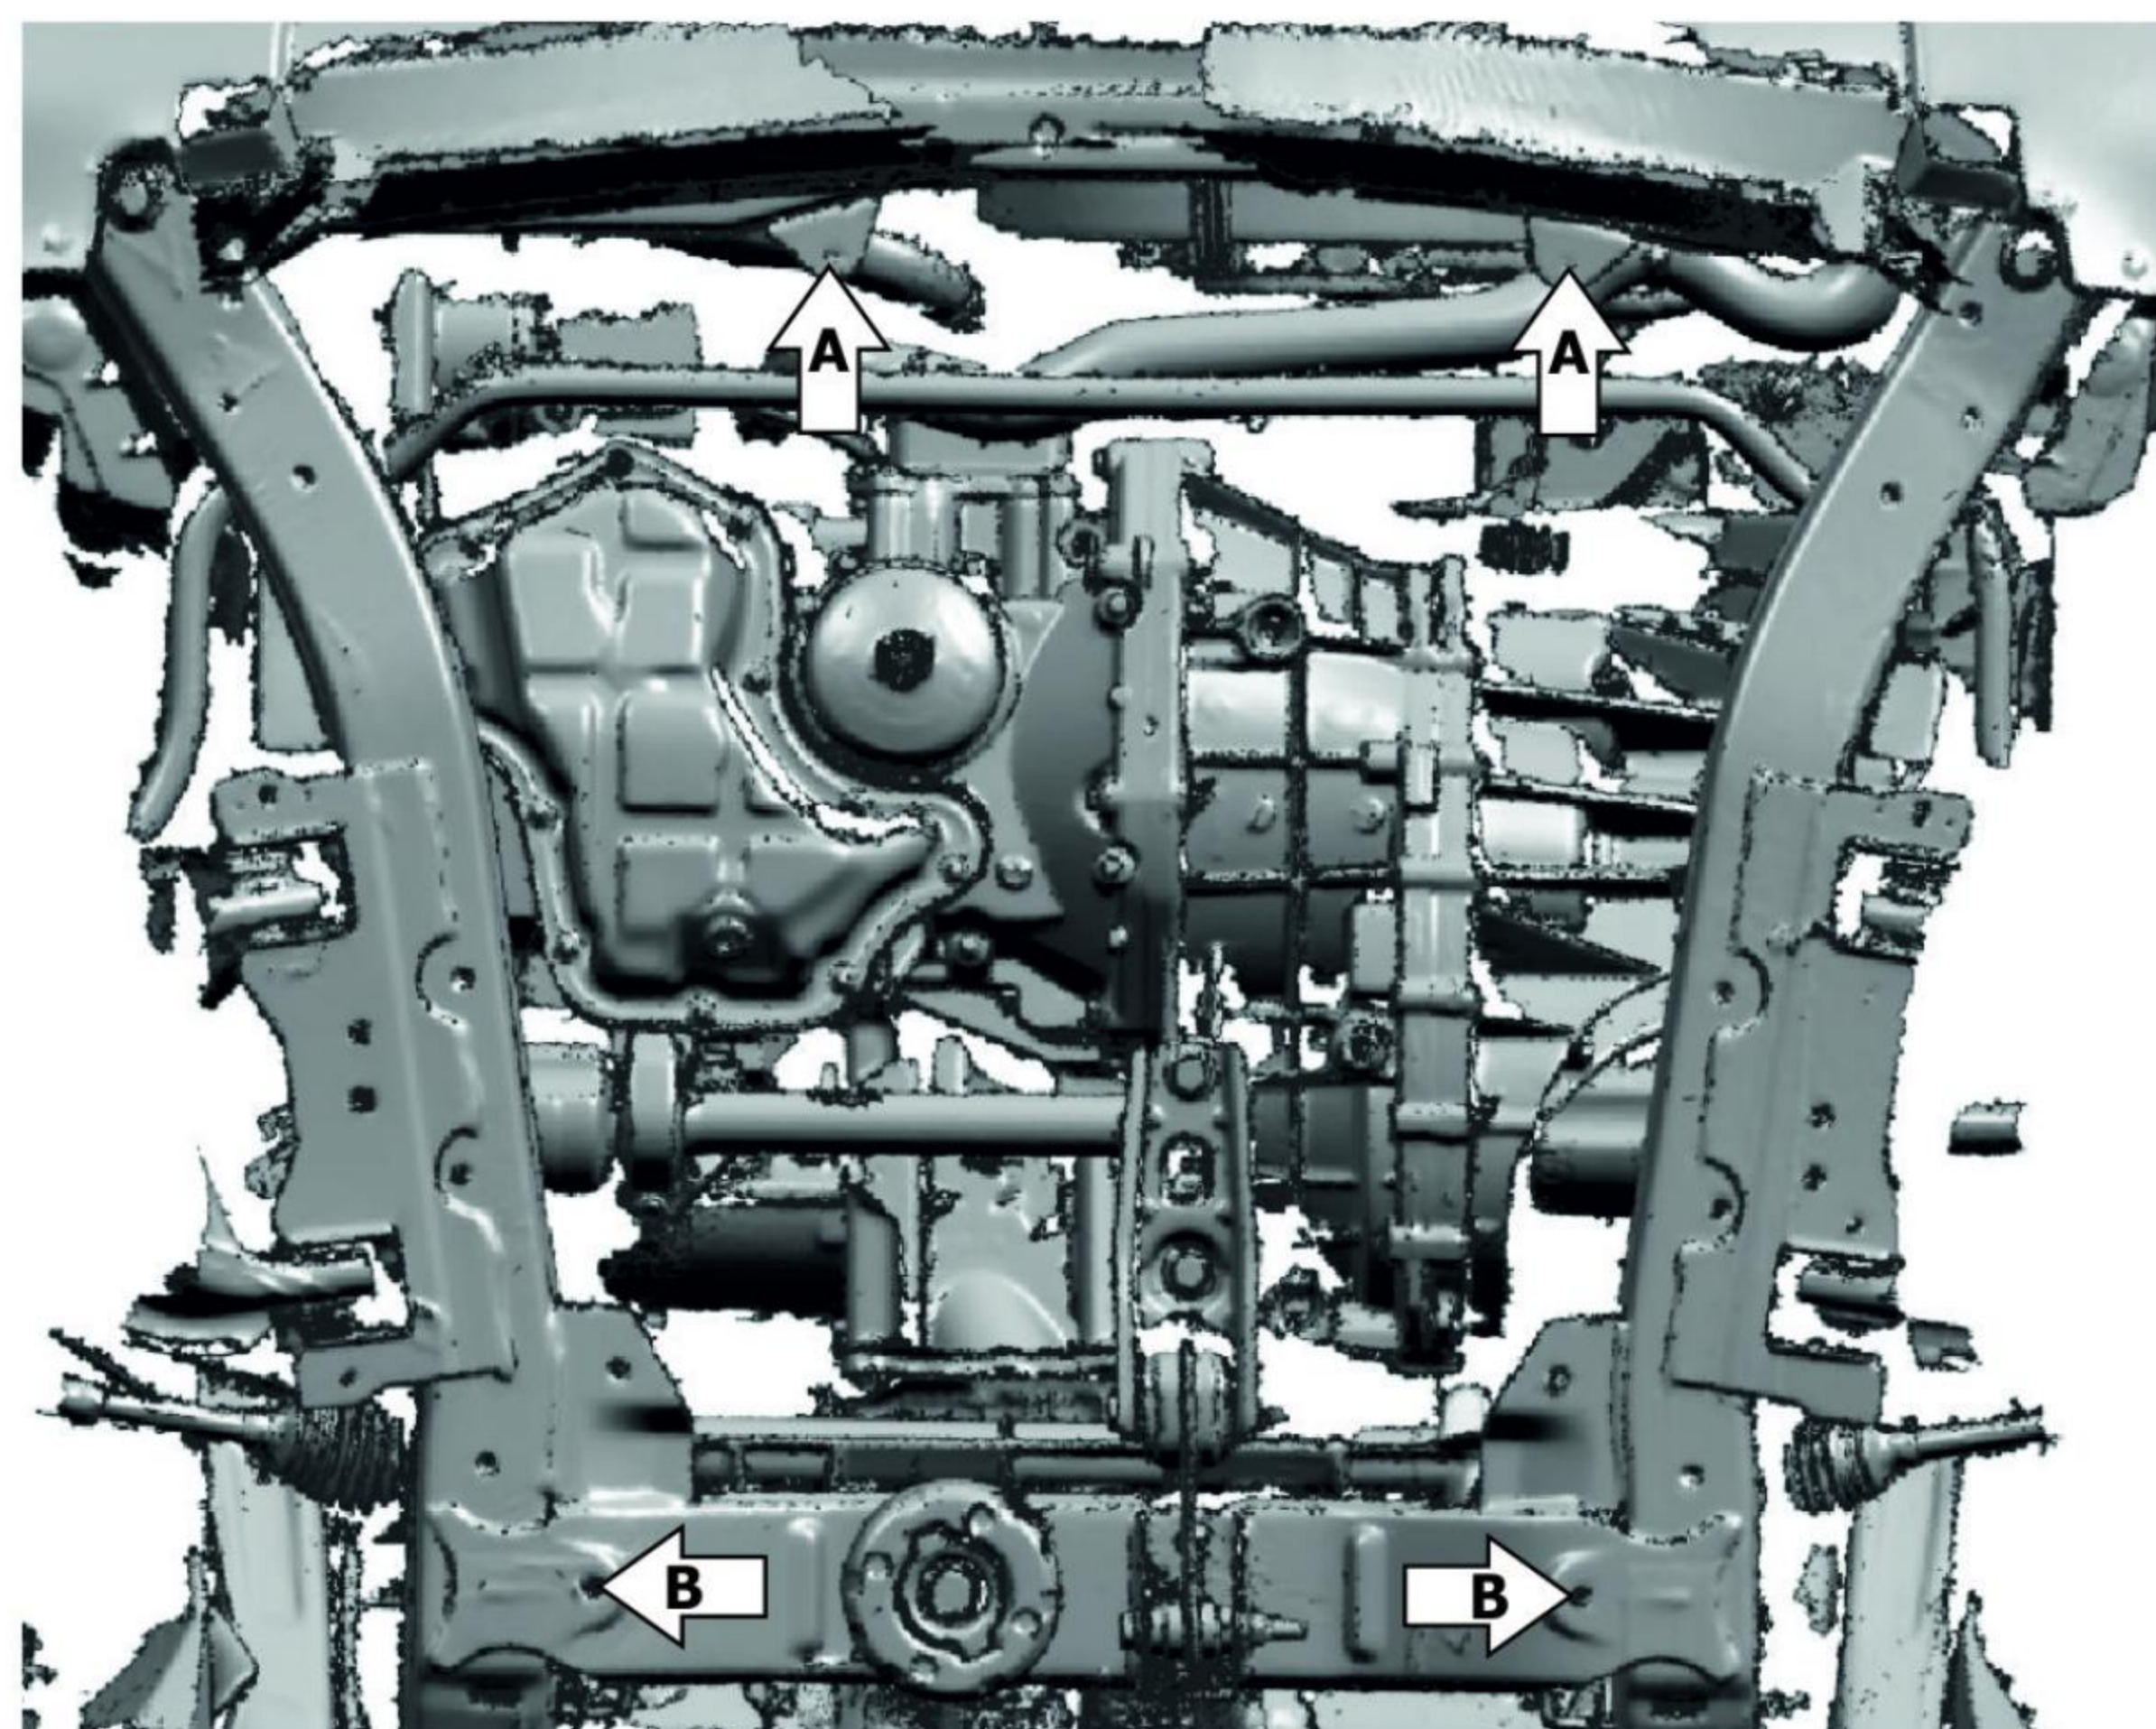


Brand	Model	Year	Engine	Gearbox	Drive
Dacia	Duster	2018-	1,2T; 1,6; 1,5d	Manual, Auto	AWD, FWD

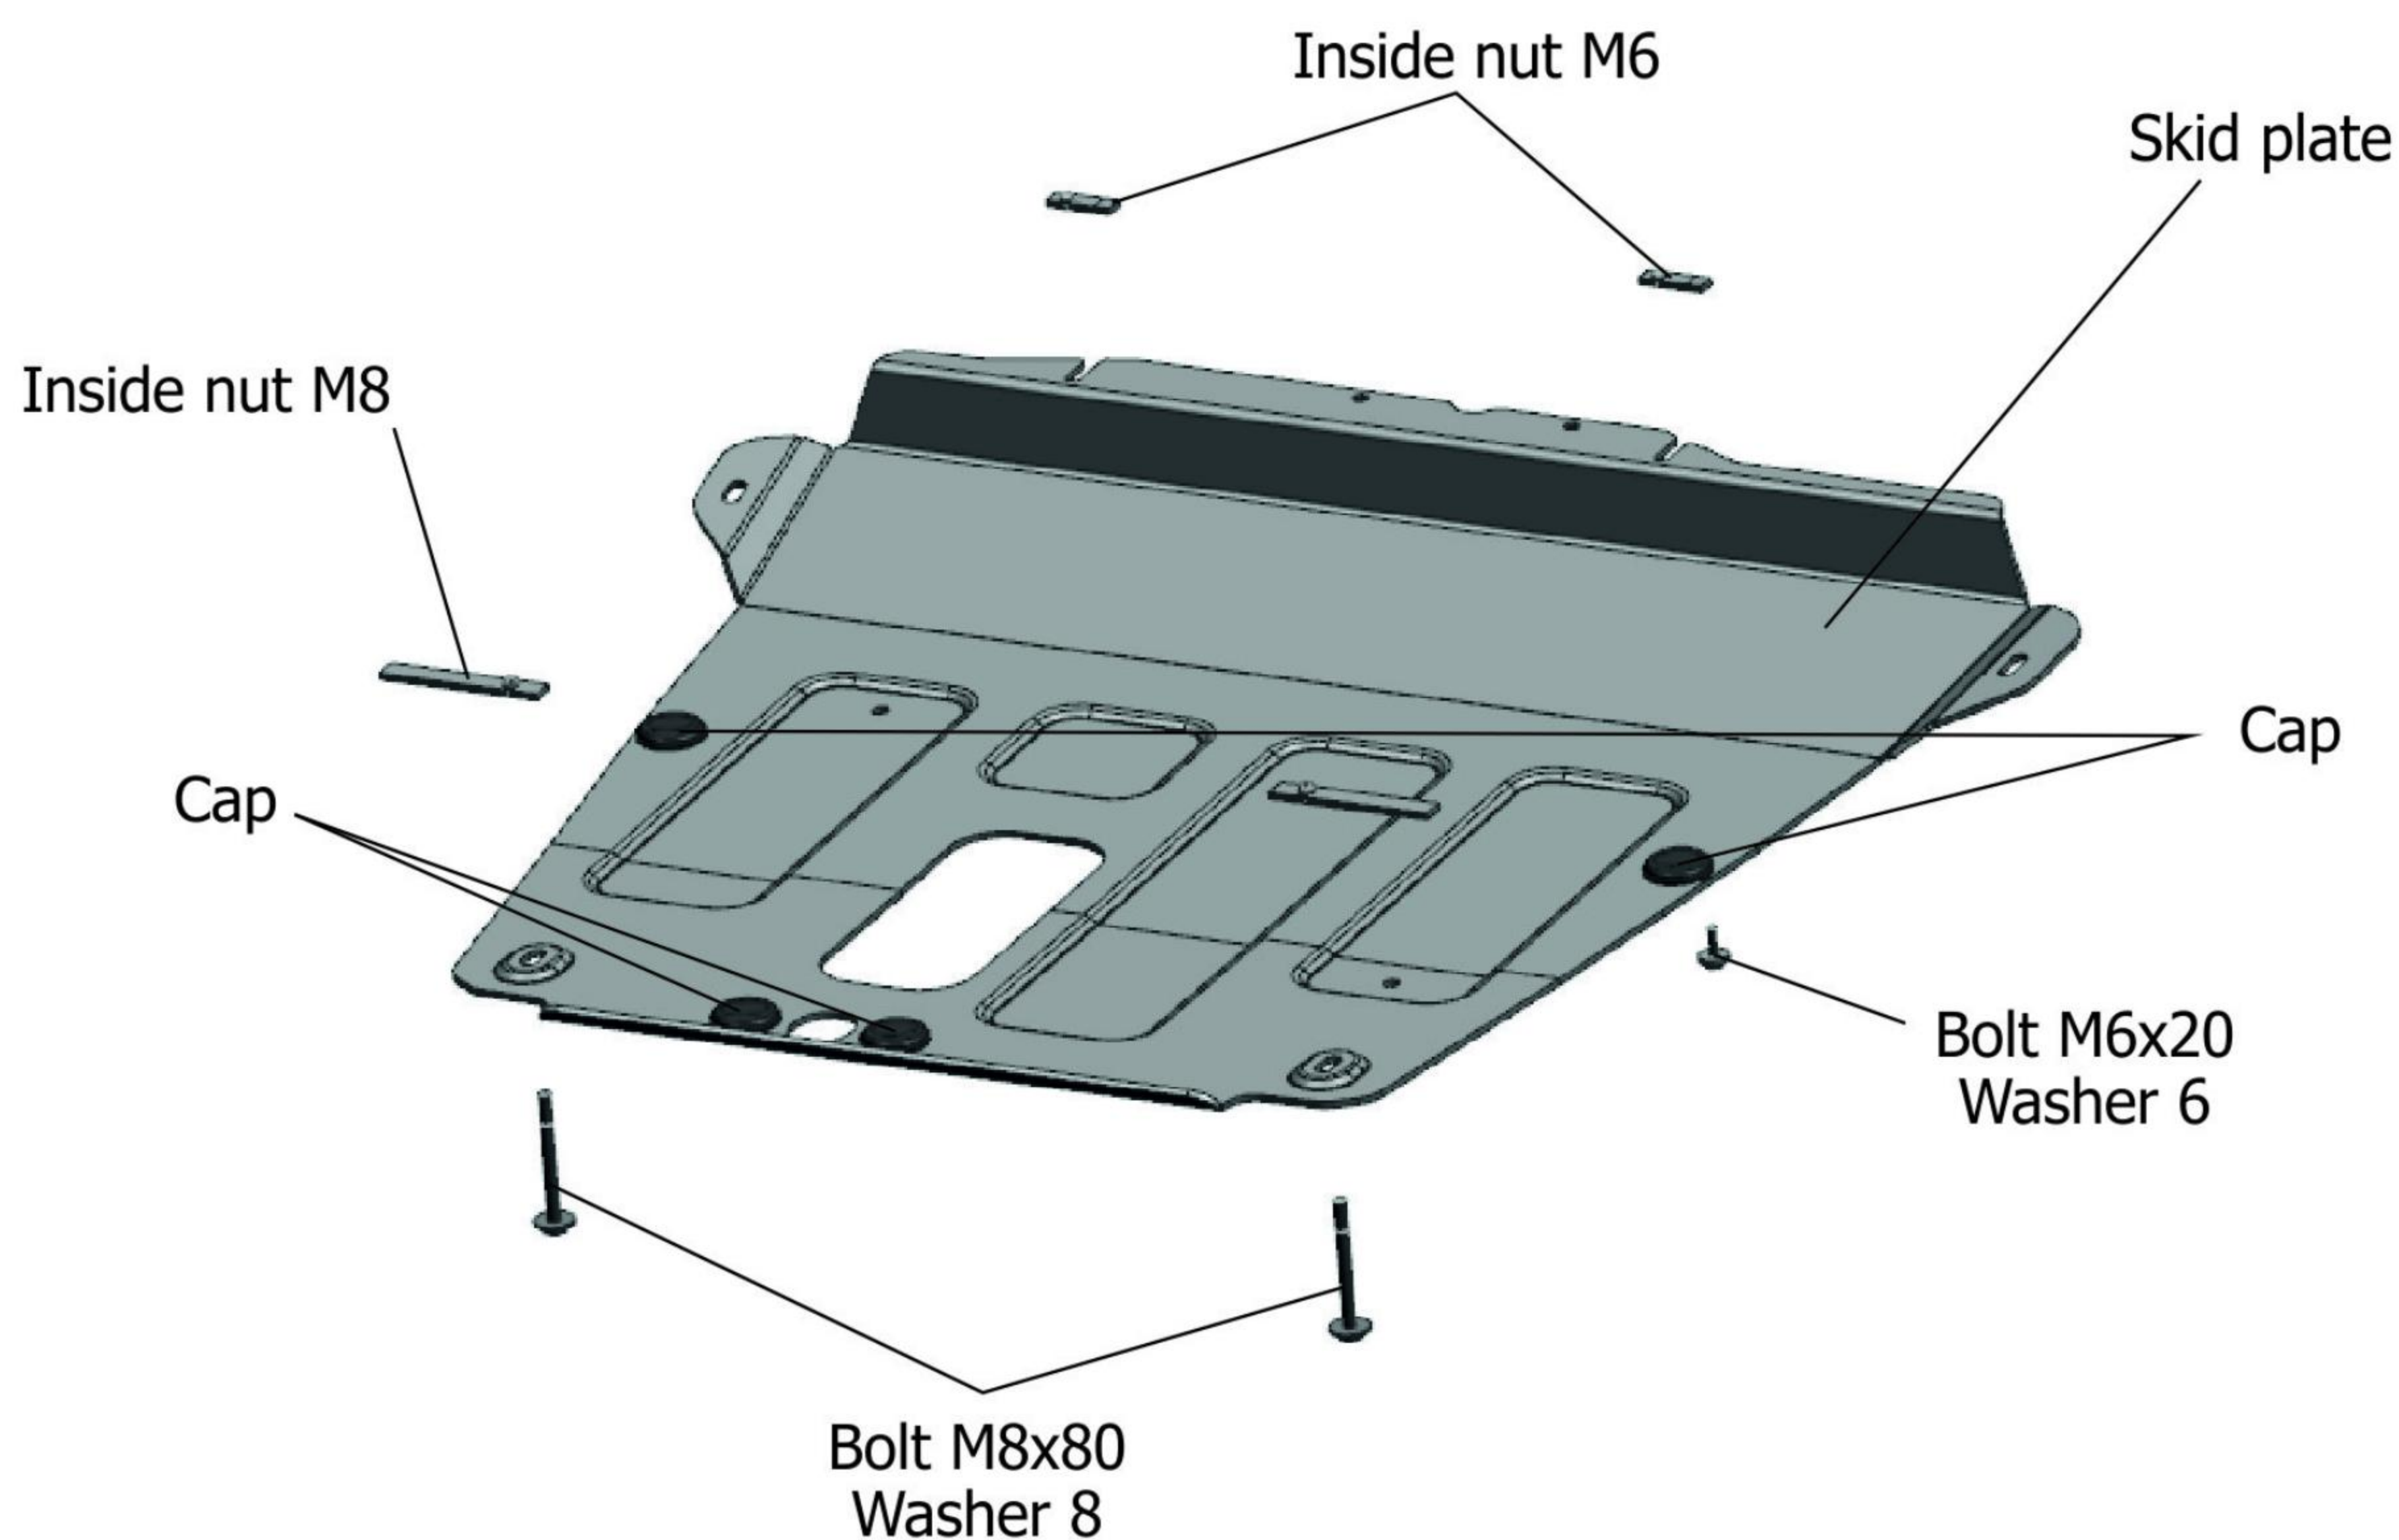

Installation instructions:

1. Remove OE Dust cover.
2. Mount inside nuts M6 over the holes (A) at the front part of sub-chassis and screw in bolts M6x20 for a few turns.
3. Mount inside nuts M8 over the holes (B) at the rear part of sub-chassis.
4. Mount front part of skid plate on installed bolts M6x20, rear part moun on installed inside nuts M8 using bolts M8x80, central part mount on OE fitting points using OE fittings (C).
5. Mount dust cover on installed skid plate using OE fittings (D).
6. Tighten all screws.

Content:

Name	QTY	Torque
Bolt M6x20	2 pcs.	9.8 Nm
Bolt M8x80	2 pcs.	24.0 Nm
Washer M6	2 pcs.	
Washer M8	2 pcs.	
Inside nut M6	2 pcs.	
Inside nut M8	2 pcs.	
Skid plate	1 pc.	
Cap	4 pcs.	