

\*For more info about compatibility with other models please see the sticker on the skid plate

## TOYOTA FORTUNER 4WD

**No.:** 5790.1/6 Radiator / engine  
5791.1/6 Gearbox  
9513.1/6 Transfer case


**Year:** 2007-2015

**Engine:** 2.5TD; 2.7i; 3.0TD

**Transmission:** All

## FITTING KIT

|                               |       |
|-------------------------------|-------|
| 1. Bolt M8x30.....            | 6 pc  |
| 2. Bolt M10x30.....           | 11 pc |
| 3. Washer 8.....              | 6 pc  |
| 4. Washer 10.....             | 15 pc |
| 5. Locking nut M8x70/20.....  | 2 pc  |
| 6. Insert nut M10x65/15.....  | 2 pc  |
| 7. Insert nut M10x100/50..... | 2 pc  |
| 8. Beam 1.....                | 1 pc  |
| 9. Beam 2.....                | 1 pc  |
| 10. Beam 3.....               | 1 pc  |

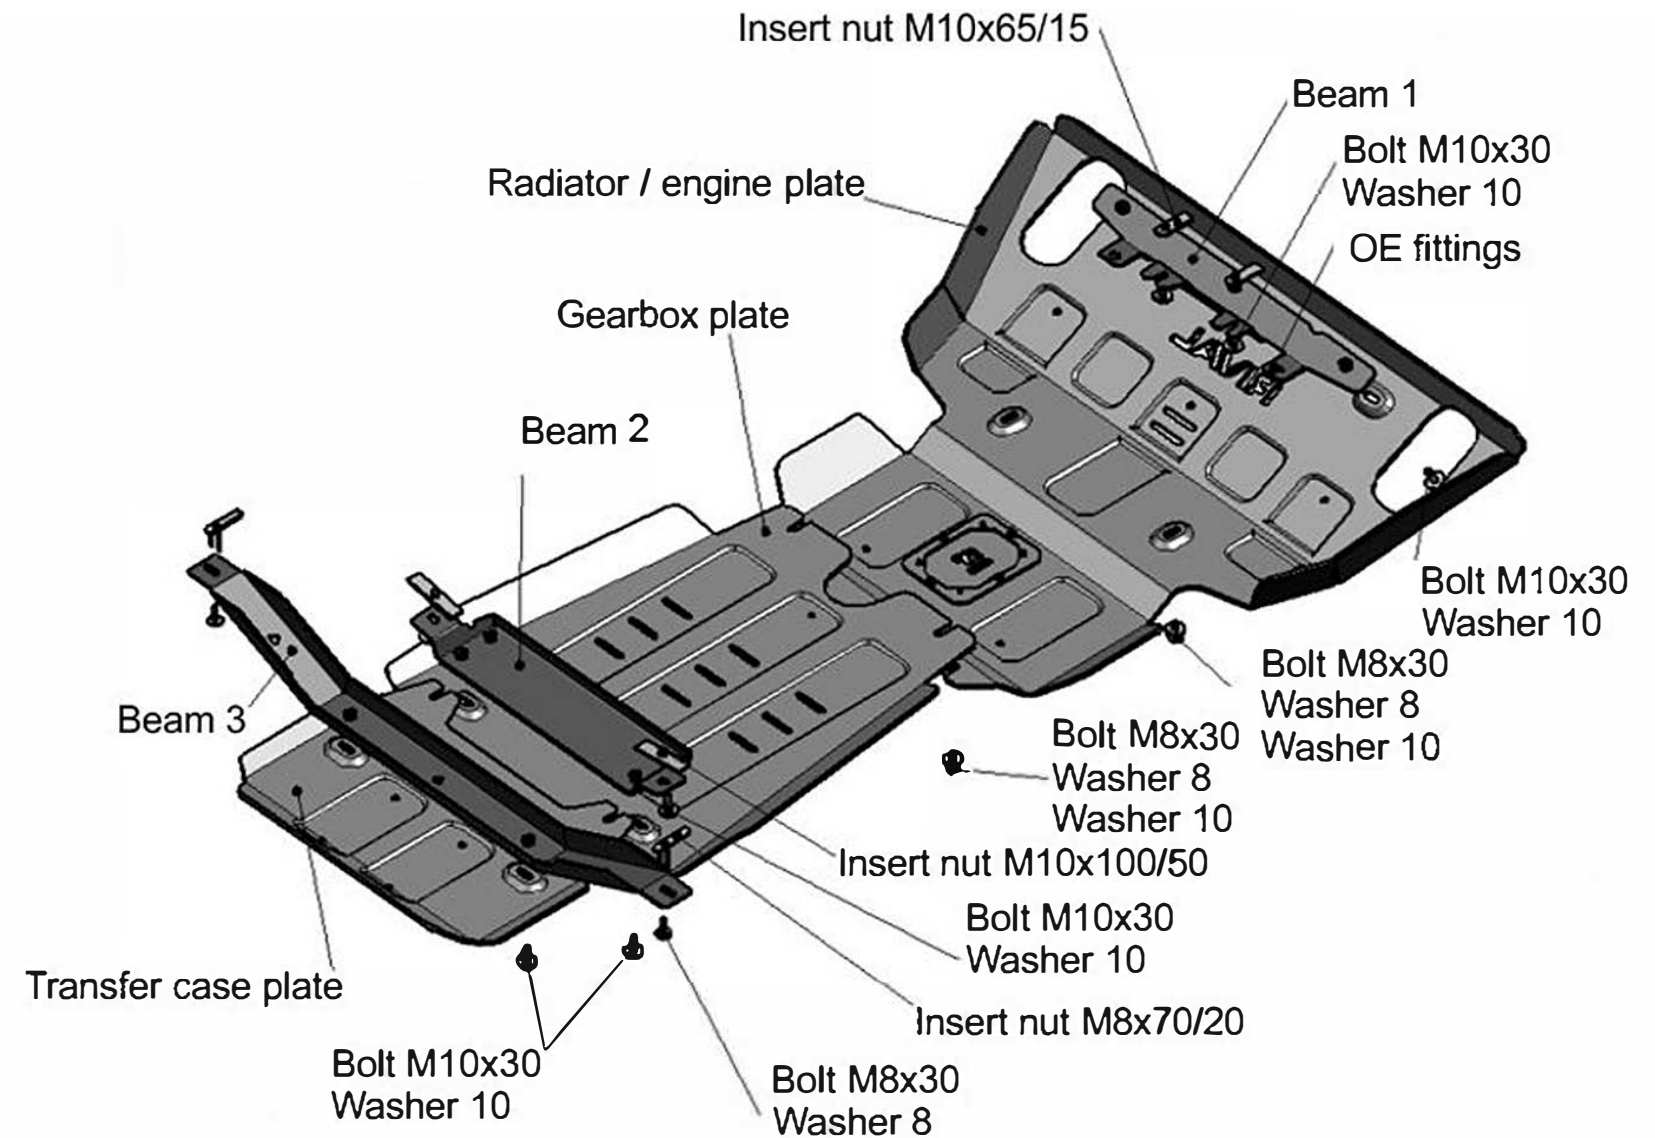

## INSTALLATION INSTRUCTIONS

1. Remove factory guards of radiator and engine.
2. Place insert nuts M10x65/15 into apertures in front end of chassis, then screw bolts M10x30 into them. Place beam 1 on mounted bolts, fix it with OE fittings.
3. Place insert nuts M10x100/50 above apertures in the cross-bar, then fix beam 2 to them with bolts M10x30.
4. Place insert nuts M8x70/20 into apertures of the chassis, then screw bolts M8x30 into them. Place beam 3 on mounted bolts.
5. Screw bolts M8x30 into OE threaded apertures in the chassis, then place rear end of radiator/engine plate on them. Fix its front end to mounted beam 1 with bolts M10x30, then fix its center to OE threaded apertures with bolts M8x30.
6. Place front end of gearbox plate under radiator/engine plate, fix its rear end to beam 2 with bolts M10x30.
7. Place front end of transfer case plate under gearbox plate, then fix its rear end to beam 3 with bolts M10x30.
8. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.

**IMPORTANT:** Skid Plate installations should only be done by a qualified person and it is the responsibility of this person to ensure correct fitment.