

Check vehicle manual












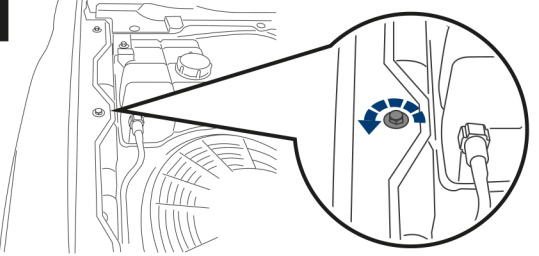





After installation, check the correct operation of all elements.






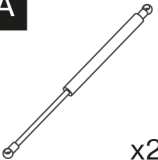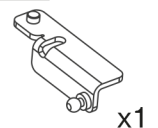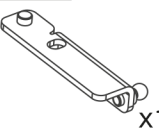




# Ford Ranger

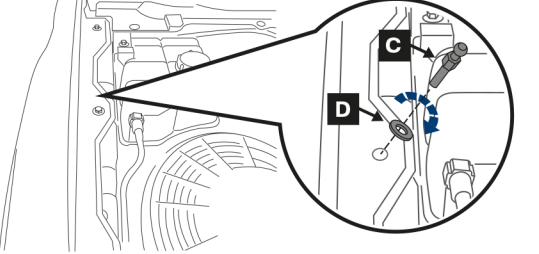HOOD GAS STRUTS  
Installation Instructions

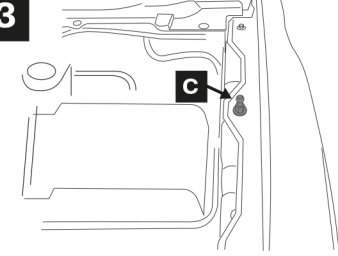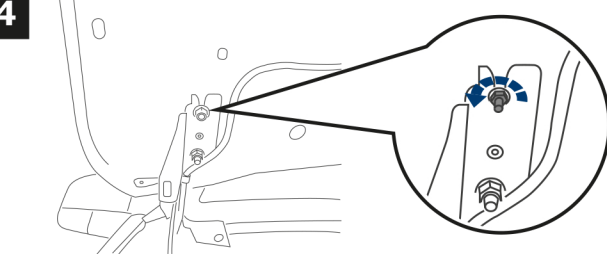

Model year:	2012-2015
Part No.:	2A.ST.1805.1
Compatibility:	all types
Weight:	⚖️ 1 kg
Installation time:	🕒 30 min
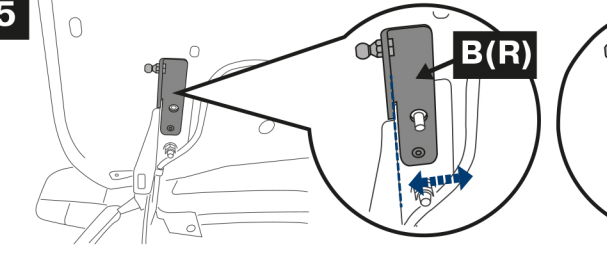
<b>A</b>  x2	<b>B(R)</b>  x1	<b>B(L)</b>  x1	<b>C</b>  x2	<b>D</b>  Ø6 x2
 Installation Instructions				
Required Tools:				
    10 mm      13 mm				
 <b>Attention!</b> Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.				
<b>1</b> 	  10 mm			
<b>2</b> 	  9 Nm 10 mm			
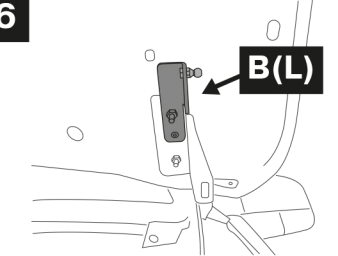
<b>3</b> 	 LHS=RHS			
<b>4</b> 	  13 mm			
<b>5</b> 	  23 Nm 13 mm			
<b>6</b> 	 LHS=RHS			
<b>7</b> 