


# Mercedes-Benz X-Class

## HOOD GAS STRUTS

### Installation Instructions



|                    |              |
|--------------------|--------------|
| Model year:        | 2017-        |
| Part No.:          | 2A.ST.3904.1 |
| Compatibility:     | all types    |
| Weight:            | ⚖ 1 kg       |
| Installation time: | 🕒 30 min     |

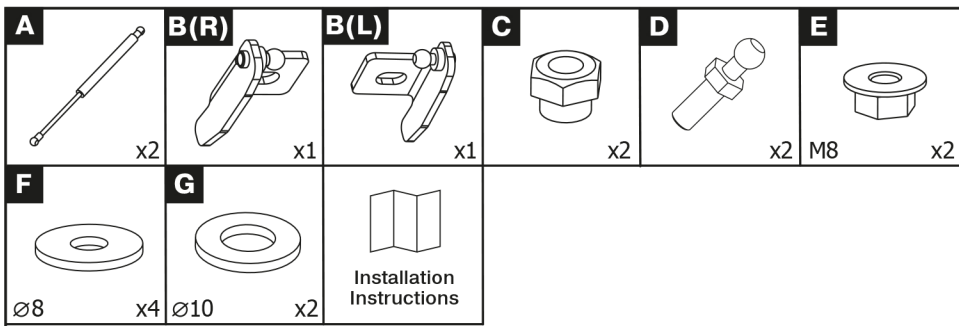

**⚠ Attention!**

Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.

**Required Tools:**

