

# Ford Ranger










## TAILGATE STRUT KIT

### Installation Instructions




Model Year:	2011-2015; 2015-
Part No.:	2AB.ST.1805.1
Compatibility:	all types
Weight:	⚖️ 1 kg
Installation Time:	🕒 30min

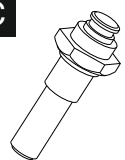


<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1	<b>D</b>  M10x30 x1	<b>E</b>  Ø8 steel x1
<b>F</b>  x2	<b>G</b>  Ø8,4 plastic x2	<b>H</b>  Self-adhesive protective film x1	 Installation Instructions	


### Required Tools

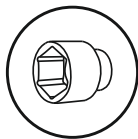

14 mm

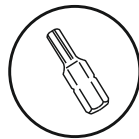

HEX 6

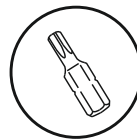

TORX 40  
TORX 50

