

8102

AFN
acessórios 4x4



Checklist / Manual de Montagem - Protecção de barras e carter - Alumino - Mitsubishi Pajero v60 07



Checklist / Fitting Instructions - Steering and oil pan guard - zn




Despiezas / Instrucciones de montaje - Protección de barras de dirección y carter - Aluminio - Mitsubishi Montero v60 07



30m

x 2

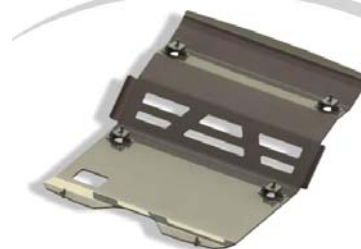


1 x1 ☐
46000605




2 x4 ☐
46000305



3 x8 ☐ $\varnothing 16$
45000048
Anilha M8x16x1,6



4 x6 ☐ $\varnothing 13$
45000014
Prf. Cb. Sx. M8x25



5 x8 ☐
45000013
Fêmea Sext. M8



6 x6 ☐ $\varnothing 18$
45000011 $\varnothing 8,4$
Anilha aba larga M8



7 x8 ☐
45000009
Prf. Cb. Con. M8x25




13



5




13

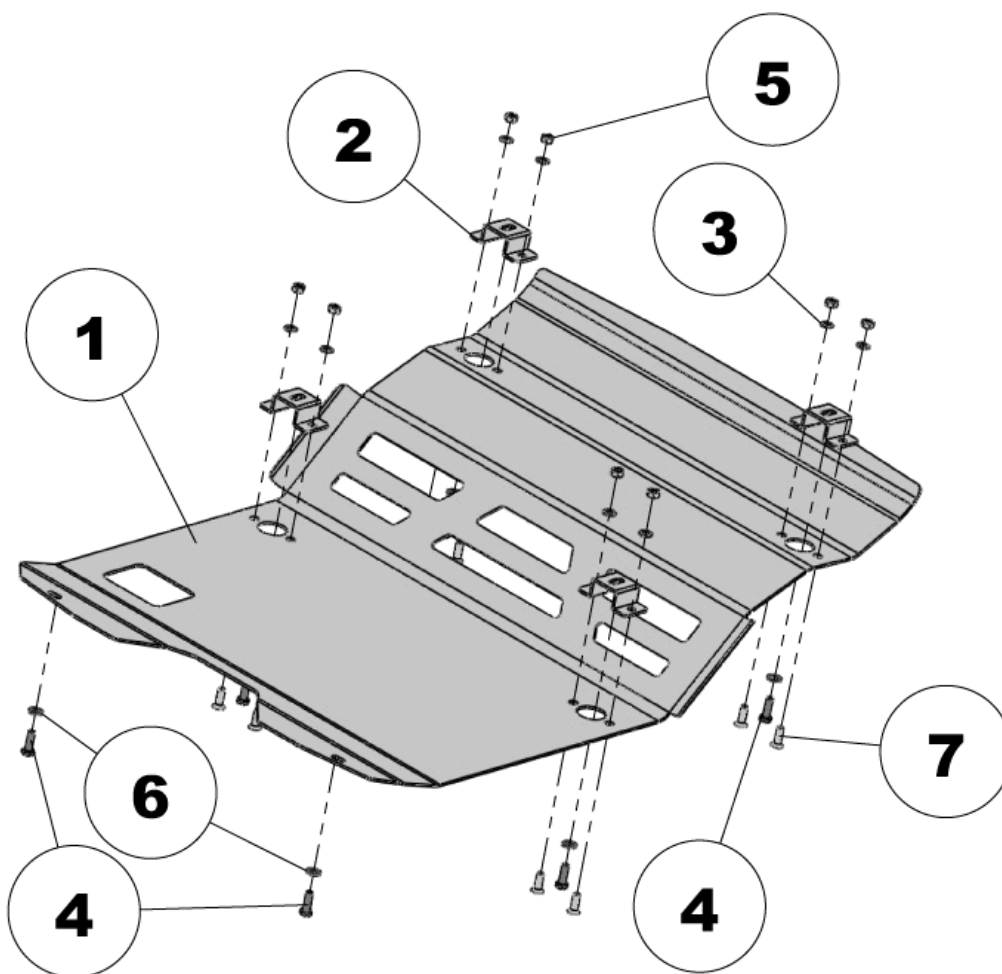

Mitsubishi Pajero V80
5P (07)

Mitsubishi Pajero V80
3P (07)



Acessórios: ____ / ____ / ____ Peças/Compostos: ____ / ____ / ____ Artigo: ____ / ____ / ____ Embalagem: ____ / ____ / ____

1

