

10083

AFN
acessórios 4x4



Checklist / Manual de Montagem - Protecção de barras - Alumínio - Land Rover Defender



Checklist / Fitting Instructions - Steering bars protectors - Aluminium - Land Rover Defender




Despiezas / Instrucciones de montaje - Protección de barras - Duraluminio - Land Rover Defender



1h



1 x1
46000144



2 x1
46000143



3 x1
46000142




4 x1
46000141



5 x2
46000140



6 x6
45000011
Anilha aba larga M8



7 x3
45000013
Fêmea Sext. M8




8 x3
45000014
Prf. Cb. Sx. M8x25




9 x6
45000016
Fêmea Sext. M10



10 x1
45000034
Fêmea Sext. M12



11 x9
45000039
Anilha M10




12 x4
45000040
Prf. Cb. Con. M10x30




13 x2
45000042
Anilha M12



14 x1
45000041
Prf. Cb. Sx. M12x110



15 x2
45000007
Prf. Cb. Sx. M10x30



13, 15, 17



13, 17, 19



Land Rover Defender
90 T-200/300 TDI (89-99)



Land Rover Defender
110 Station Wagon
TDI/TD5 (94)



Land Rover Defender
130 Cab. Dupla
TDI/TD5 (94-07)



Land Rover Defender
110 Hard-top TDI/TD5
(-)



Land Rover Defender
110 Pick-up-HC
TDI/TD5 (-)




Land Rover Defender
110 Pick-up-RHD
TDI/TD5 (-)



Land Rover Defender
110 Cab. Dupla
TDI/TD5 (-)



Land Rover Defender
90 TD5 (99-07)

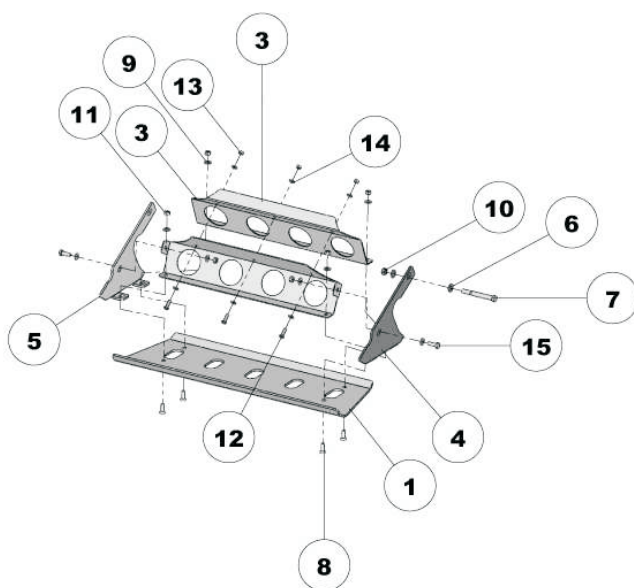

Acessórios: ____ / ____ / ____ Peças/Compostos: ____ / ____ / ____ Artigo: ____ / ____ / ____ Embalagem: ____ / ____