

10017.PCGTD5

AFN
acessórios 4x4



Checklist / Manual de Montagem - Pára-choques c/ base guincho - Defender 90 / 130 TD5



Checklist / Fitting Instructions - Front bumper with winch base - Defender 90 / 130 TD5




Despiezas / Instrucciones de montaje -



1h



1 x4



45000015

Prf. Cb. Sx. M10x25


1 x2



47000087




2 x4



45000039

Anilha M10

3 x1



45000073

Manilha univ. 5/8"

Land Rover Defender 90 T-200/300 TDI (89-99)



Land Rover Defender 110 Station Wagon TDI/TD5 (94)



4 x4



45000201

Prf.S.R.P.M12x120x35

7 x4



45000066

Fêmea Freiada M12



10 x8



45000042

Anilha M12

11 x4



45000032

Tmp. plst. p/Prf.M10

Land Rover Defender 130 Cab. Dupla TDI/TD5 (94-07)



Land Rover Defender 90 TD5 (99-07)




1




2



3

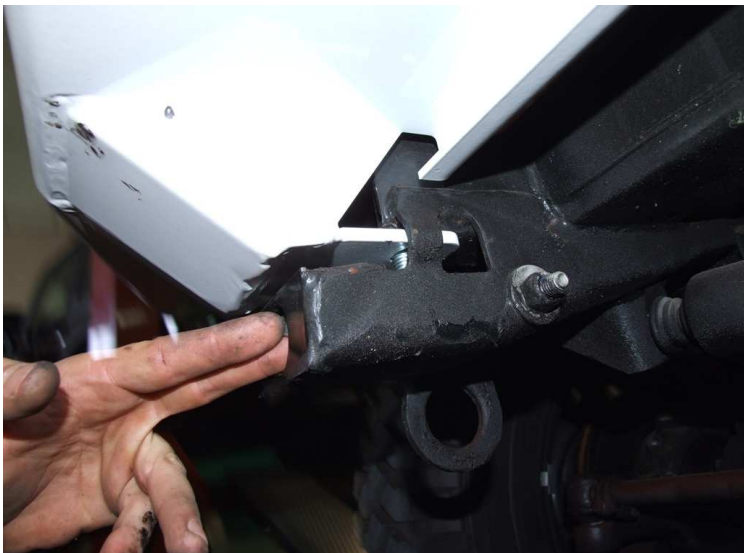

4

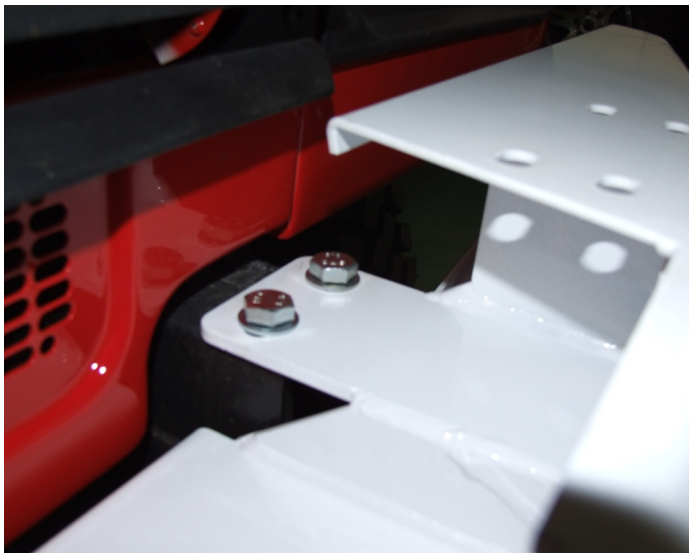

5



6

