

1711.PCGG

AFN
acessórios 4x4



Checklist / Manual de Montagem - Pára-choques c/ base guincho; Tipo I



Checklist / Fitting Instructions - Front Winch Bumper; Type I;



Despiezas / Instrucciones de montaje -




1h



x 1

1 x1 47001027		2 x1 47000087		3 x2 45000073		4 x12 45000039	
	☐		☐	Manilha univ. 5/8"	☐	Anilha M10	☐
5 x4 45000038		6 x2 45000032		7 x4 45000017		8 x4 45000007	
Prf. S.R.P.M10x80x30	☐	Tmp. plst. p/Prf.M10	☐	Fêmea Freitada M10	☐	Prf. Cb. Sx. M10x30	☐

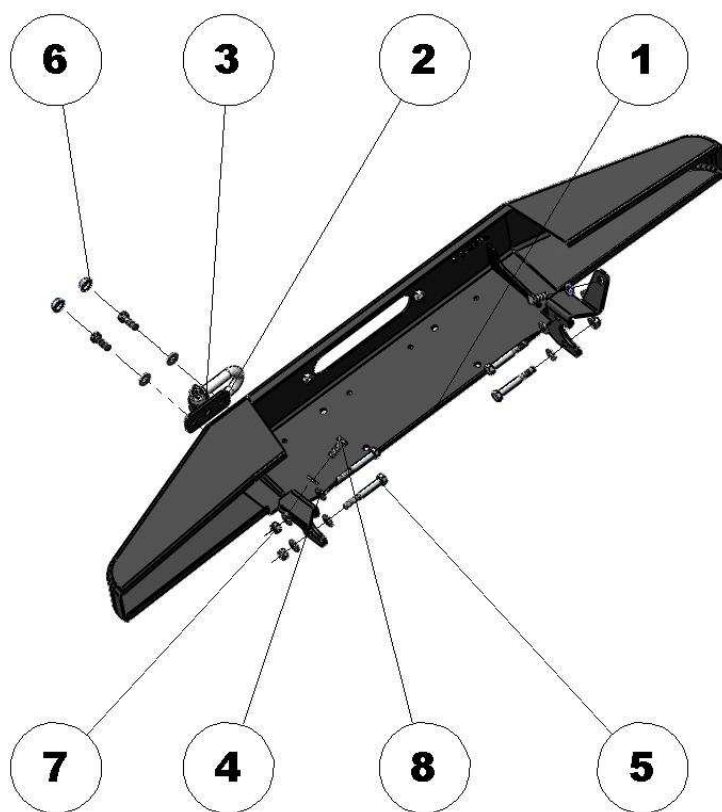

Suzuki Samurai
Gasolina ()

Suzuki Samurai Diesel
()



AFN
acessórios 4x4

Acessórios: ____ / ____ / ____ Peças/Compostos: ____ / ____ / ____ Artigo: ____ / ____ / ____ Embalagem: ____ / ____ / ____


1




2



3

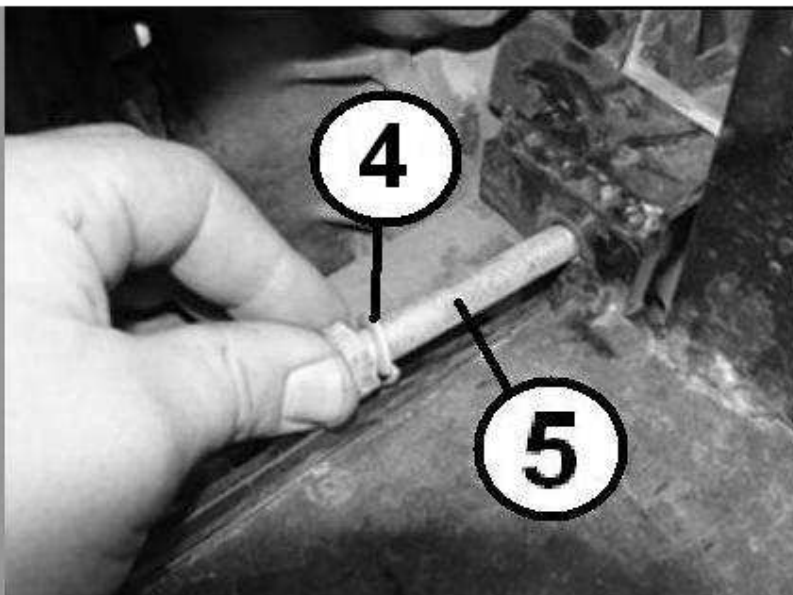

4

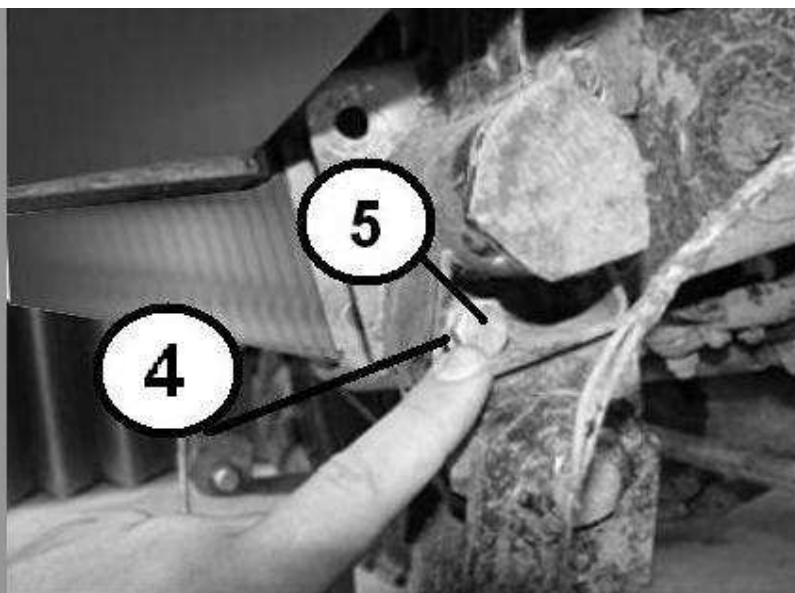

5



6

