

6050

AFN
acessórios 4x4



Checklist / Manual de Montagem - Estribos
em tubo c/Al Gota - Preto - Defender 130



Checklist / Fitting Instructions - Side steps
with treadplate - spray finish steel - Defender
130

AFN
acessórios 4x4



Despiezas / Instrucciones de montaje -



30m



x 1

1 x1 ☐
47000681



2 x1 ☐
47000680



3 x1 ☐
47000679



4 x1 ☐
47000677



Land Rover Defender
130 Cab. Dupla TD5
(08-)




5 x1 ☐
47000678




6 x1 ☐
47000676



7 x8 ☐
45000015



8 x16 ☐
45000039



Prf. Cb. Sx. M10x25

Anilha M10


9 x8 ☐
45000017



10 x8 ☐
45000051



11 x18 ☐
45000048



12 x10 ☐
45000018



Fêmea Freiada M10

Prf. S.R.P.M8x50x25


Anilha M8x16x1,6

Fêmea Freiada M8

13 x8 ☐
45000488




14 x2 ☐
45000014



Prf. Cb. Sx. M8x25




1

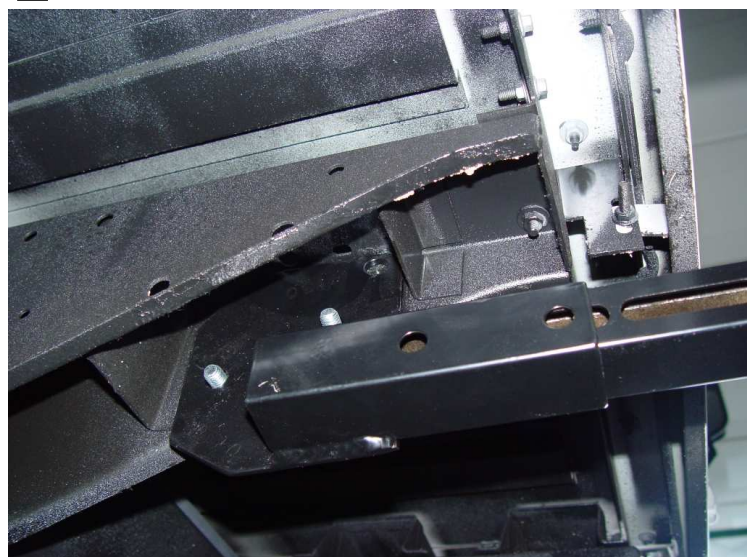

2



3

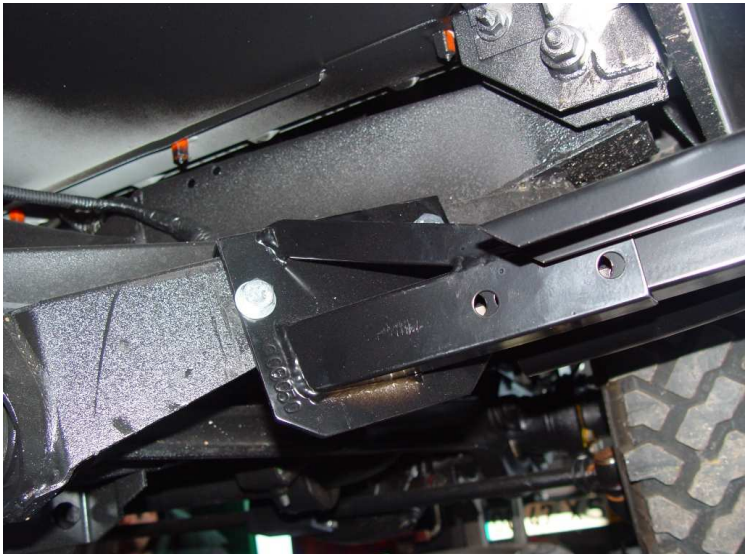

4



5

