



WILDBEAR

**Fitting Instructions
BA 7561
Fuel Cooler Guard
Defender Puma 2007 on**



KIT CONTENTS

Fuel cooler guard
3 x Set screws

TOOLS REQUIRED

Ratchet
Socket set

INSTRUCTIONS

- Locate the fuel cooler on the inside of the chassis rail (fig 1)
- Remove the four bolts holding the fuel cooler in place. (fig 2). Being careful not to damage the pipes insert the main body of the cooler guard behind the cooler along the chassis.
- Replace the bolts making sure the guard is held in place with the corresponding holes.
- Connect the front face of the cooler guard with the new screws provided.
- Tighten all bolts to secure in place. Do not over tighten and check bolts regularly.

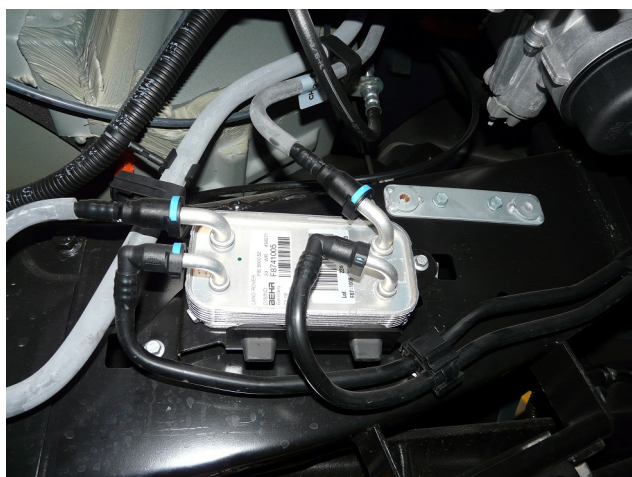


Fig 1



Fig 2

Thank you for buying and using Wildbear™ Products.

Proudly Designed and Manufactured in the UK



Est. UK 1958

Bearmach
LAND ROVER PARTS

Parts and Accessories for all Land Rovers



Head office: Bearmach Limited, Bearmach House, Unit 8, Pantglas Industrial Estate, Bedwas, Caerphilly, CF83 8GE
Tel: +44 (0)29 20 856550 Fax: +44 (0)29 20 865586 Email: bearmach@bearmach.com Web: www.bearmach.com