



WILDBEAR

Fitting Instructions
BA 7588 / BA 7589*
Tank Guard
Defender 110 / 130 Td5 / Tdci



KIT CONTENTS

1 x Tank Guard

TOOLS REQUIRED

17mm Socket
Ratchet
Support

When working on your vehicle please ensure that it is adequately chocked, and where applicable supported on axle stands.

If in doubt please refer to a qualified technician or your nearest Wildbear™ fitting centre.

**We recommend wiping the alloy surface with a soft cloth and WD40 to remove protective film used in manufacture.*

INSTRUCTIONS

- This tank guard is designed to fit over the existing guard utilising the existing bolts. (Fig 1 & Fig 2)
- It is recommended to have as little fuel in the vehicle as possible to reduce the weight of the tank as it may need to be supported.
- Loosen the bolts and push the guard into place and retighten the bolts.
- If an anti-sway bar is fitted it will first be necessary to lower the rear section of the bar where it is attached to the chassis, let it drop down and fit the tank guard into place, re-fit the anti-sway bar.

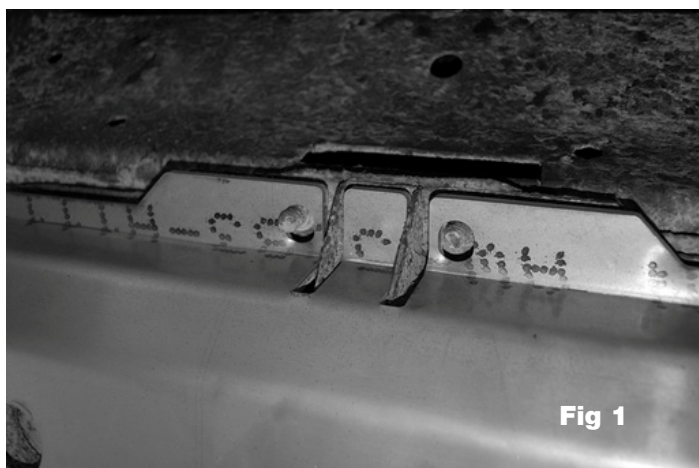


Fig 1



Fig 2

Thank you for buying and using Wildbear™ Products.

Proudly Designed and Manufactured in the UK



Est. UK 1958

Bearthmach
LAND ROVER PARTS

Parts and Accessories for all Land Rovers



Head office: Bearmach Limited, Bearmach House, Unit 8, Pantglas Industrial Estate, Bedwas, Caerphilly, CF83 8GE
Tel: +44 (0)29 20 856550 Fax: +44 (0)29 20 865586 Email: bearthmach@bearthmach.com Web: www.bearthmach.com