


FORD TRANSIT

No.: 1833.1 Engine block & gearbox

Body: All
Year: 2007-
Engine: 2.2
Drive: FWD

FITTING KIT

1. Bolt M10x30.....	10 pc
2. Nut M10.....	4 pc
3. Washer 10.....	14 pc
4. Insert nut M10x105/35.....	2 pc
5. Insert brad 2M10x60x80.....	2 pc
6. Right wing.....	1 pc
7. Left wing.....	1 pc
8. Rubber hatch.....	1 pc

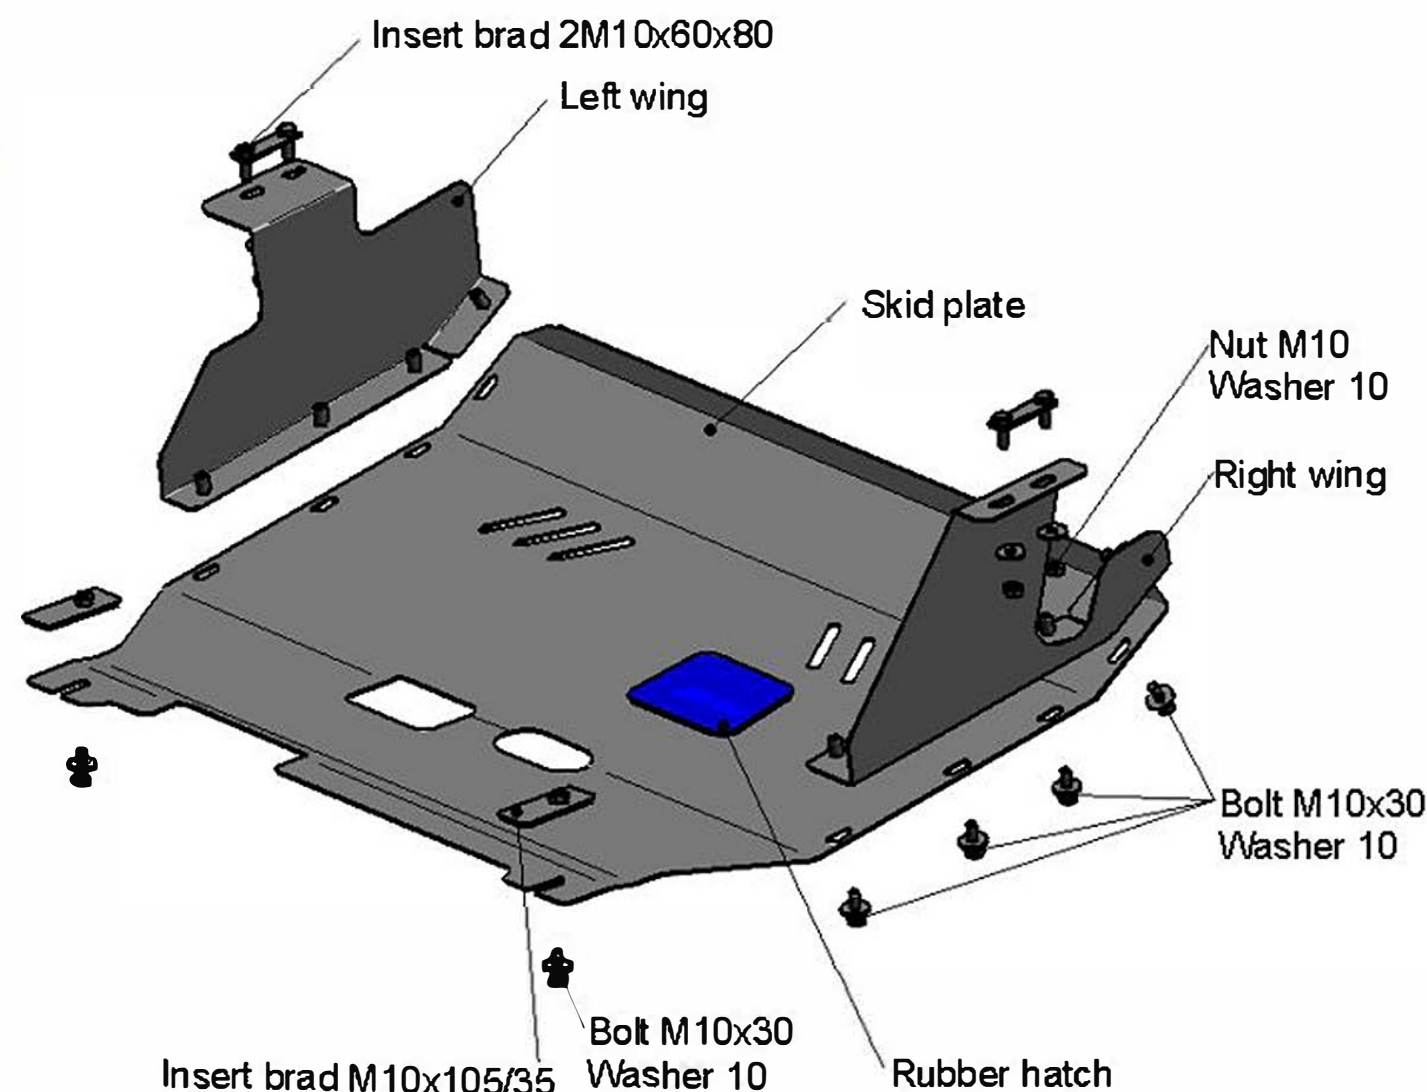

INSTALLATION INSTRUCTIONS

1. Mount insert brads 2M10x60x80 into apertures of longerons.
2. Attach the wings to mounted insert brads 2M10x60x80 with nuts M10.
3. Screw bolts M10x30 into insert nuts M10x105/35 and then place them on underframe.
4. Place rear end of skid plate on mounted bolts M10x30, fix its front end to mounted wings with bolts M10x30.
5. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Use of pneumatic tools is prohibited.