

FORD EXPLORER

No.: 1835.1 AC pipes

Year: 2011-


Engine: All

Transmission: AT

FITTING KIT

1. Bolt M10x25.....	3 pc
2. Washer 10.....	3 pc
3. Insert nut M10x65/15.....	2 pc
4. Insert nut M10.....	1 pc

*For more info about compatibility with other models
please see the sticker on the skid plate

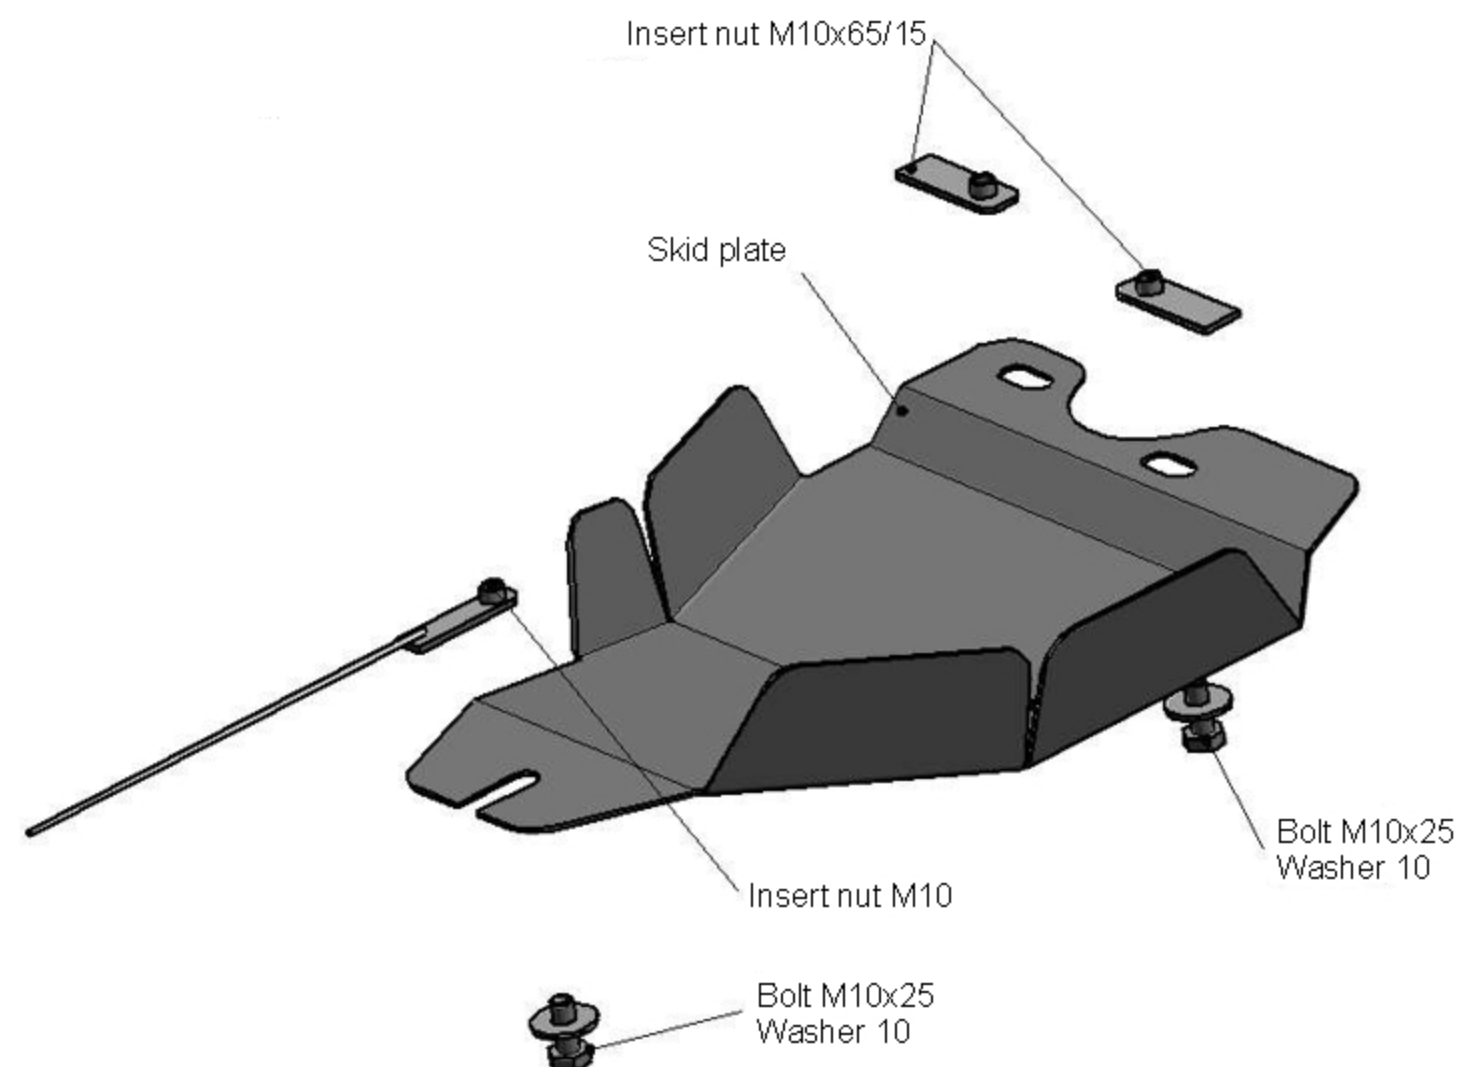

INSTALLATION INSTRUCTIONS

1. Place insert nut M10 above aperture in car body, then screw bolt M10x25 into it.
2. Place insert nuts M10x65/15 above apertures in car body.
3. Place rear end of skid plate on mounted bolt M10x25, then fix its front end to mounted insert nuts M10x65/15 with bolts M10x25.
4. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.

*For more info about compatibility with other models
please see the sticker on the skid plate



1, 2



3, 4