
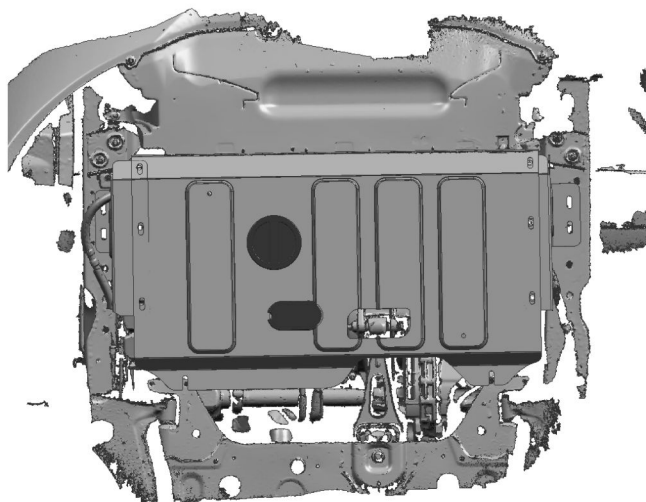
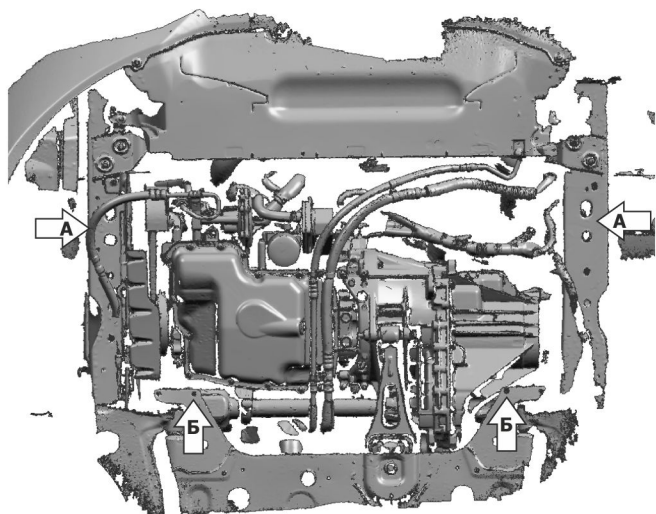


BRAND	MODEL	YEAR	ENGINE	Transmission	Drive
Ford Ford	Transit Transit Custom	2014- 2013-	2.2D 2.2D	Manual Manual	FWD; 4WD FWD

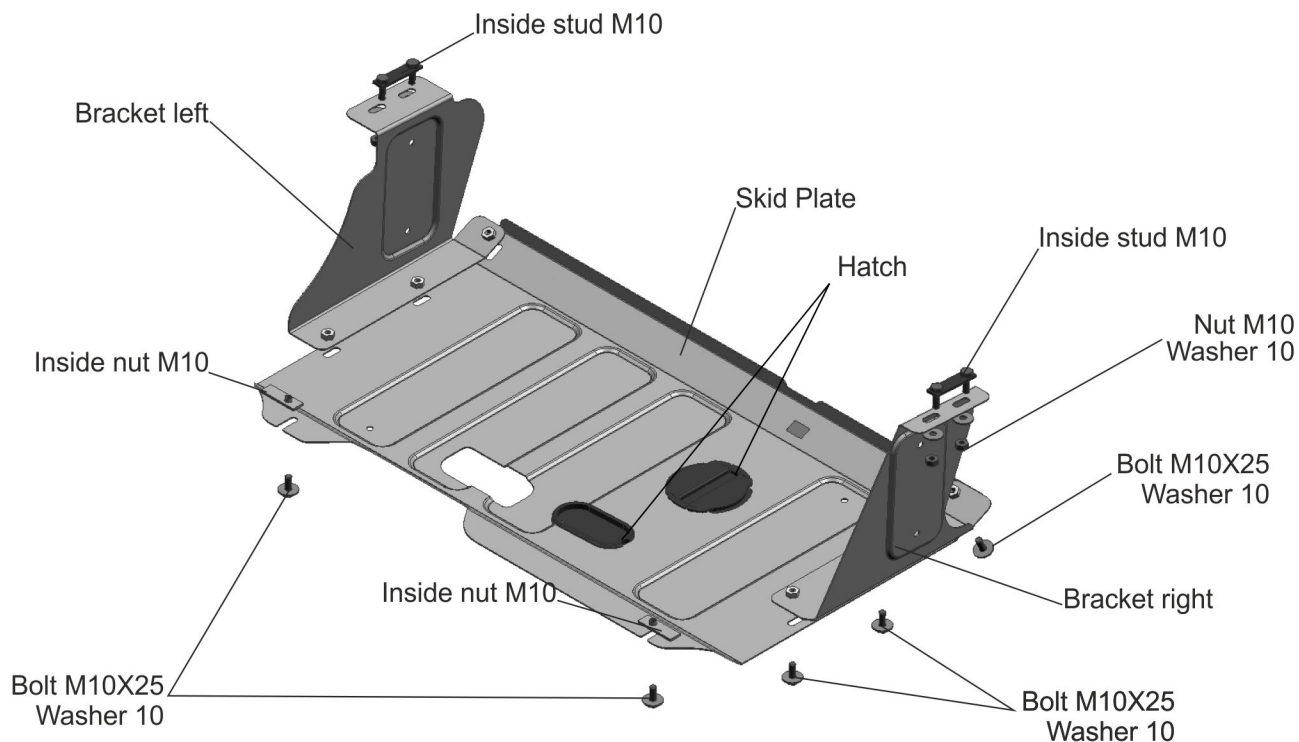

Installation manual:

1. Mount Inside Studs above the holes(A) and fix right bracket using Nut M10
2. Mount Inside Studs above the holes(B) and fix left bracket using Nut M10
3. Mount Inside Nuts M10 above the holes (B) and screw in Bolts M10x25 on 2-3 turns.
4. Mount of Skid Plate. Rear side of plate mount on installed Bolts M10x25, front side of plate mount on installed brackets using Bolts M10x25.
5. Tighten all screws.

Fittings includes:

Name	QTY	Torque
Bolt M10X25	8 pcs.	47.0 Nm
Nut M10	4 pcs.	
Inside stud M10	2 pcs.	
Washer 10	12 pcs.	
Inside nut M10	2 pc.	
Bracket left	1 pc.	
Bracket right	1 pc.	
Skid Plate	1 pc.	
Hatch	2 pc.	