
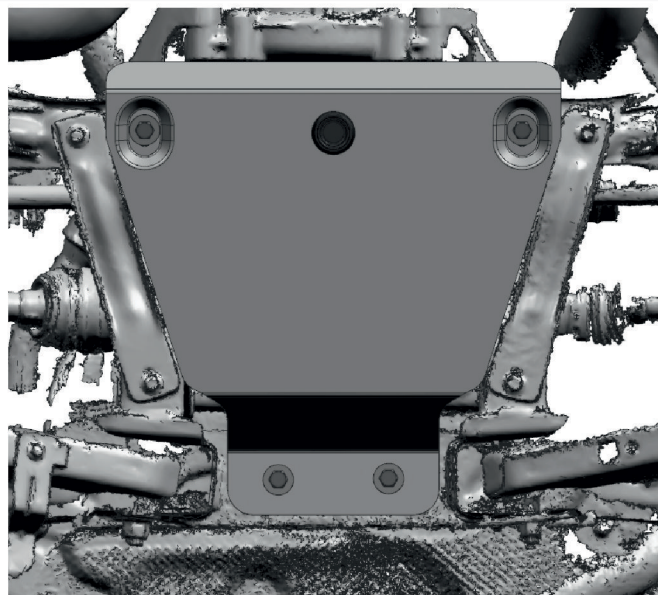
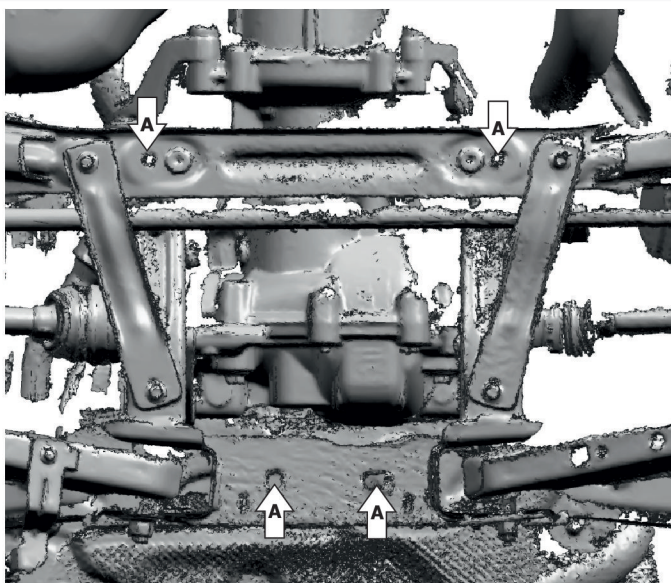


Brand	Model	Year	Engine	Gearbox	Drive
Ford Ford	Kuga Kuga	2013-2016 2016-	1.6T; 2.0D 1.5T	Auto Auto	AWD AWD

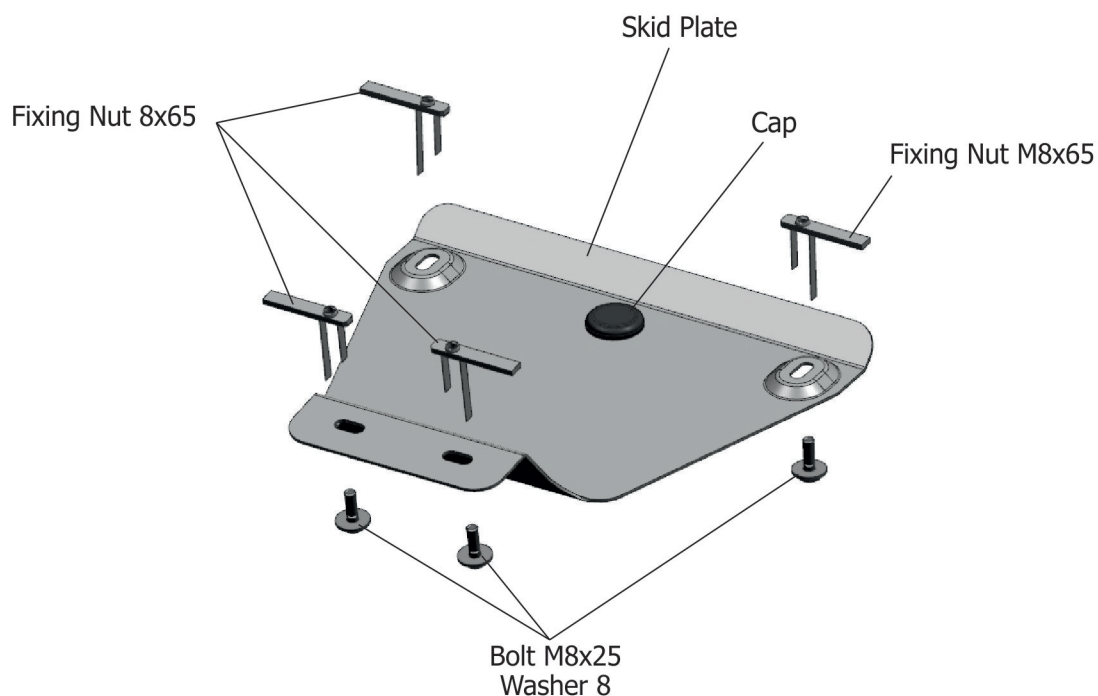

Installation Instructions:

1. Remove OE dust cover.
2. Mount fixing nuts M8x65 over the holes (A).
3. Mount skid plate on installed fixing nuts M8x65 using bolts M8x25.
4. Tighten all screws with required torque.

Content:

Name	QTY	Torque
Bolt M8x25	4 pcs.	24.0 Nm
Washer M8	4 pcs.	
Fixing Nut M8x65	4 pcs.	
Skid plate	1 pc.	
Cap	1 pc.	