
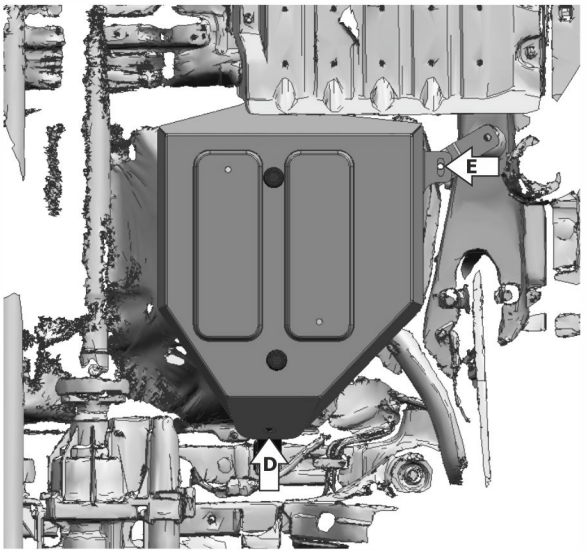
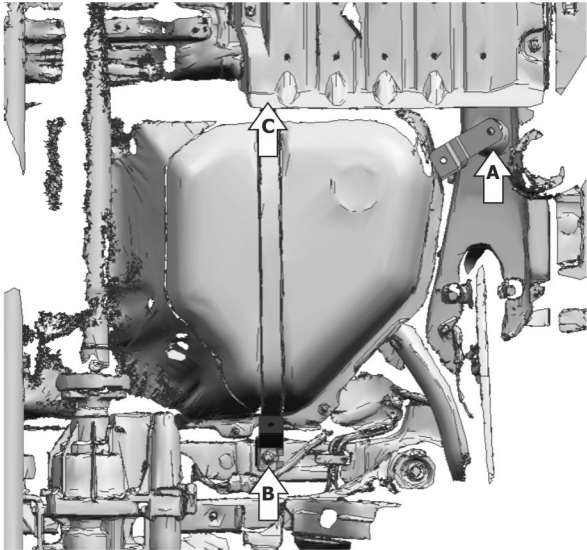


BRAND	MODEL	YEAR	ENGINE	GEARBOX	DRIVE	BRAND	MODEL	YEAR	ENGINE	GEARBOX	DRIVE
Hyundai	Tucson	2015-2018, 2018-	1.6 GDi	ALL	FWD	KIA	Sportage	2016-	2.0 MPI	ALL	FWD, 4WD
Hyundai	Tucson	2015-2018, 2018-	2.0 MPI	ALL	FWD, 4WD	KIA	Sportage	2016-	2.0 CRDI	ALL	4WD
Hyundai	Tucson	2015-2018, 2018-	2.0 CRDI	ALL	FWD, 4WD	KIA	Sportage	2016-	1.6T(177n.c.)	ALL	FWD, 4WD
Hyundai	Tucson	2015-2018, 2018-	1.6T(177n.c.)	ALL	FWD, 4WD						

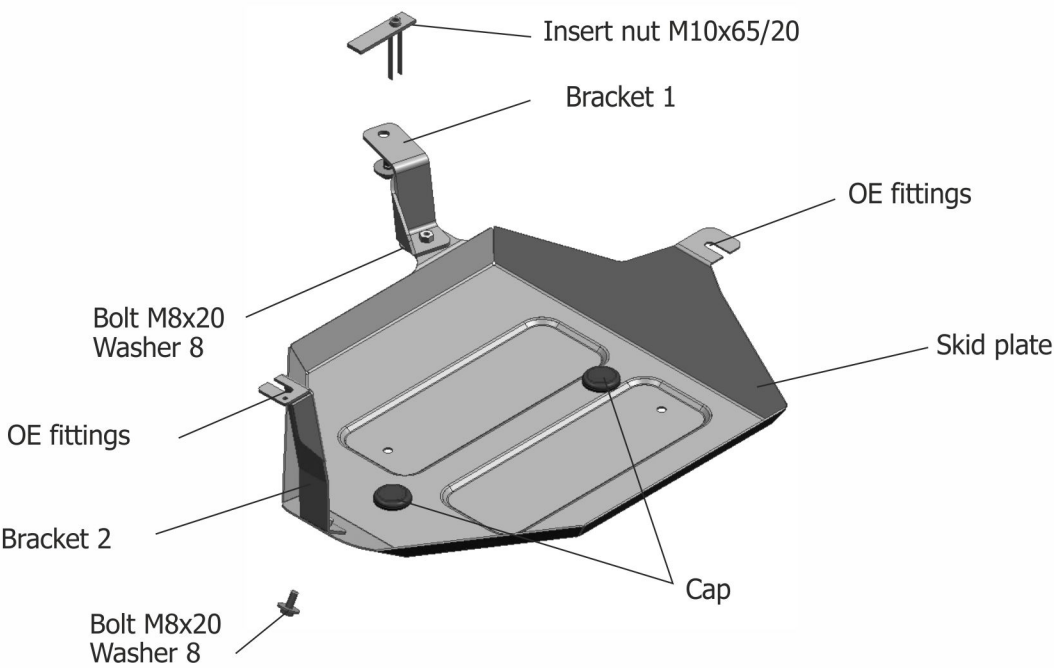

Installation Instructions:

1. Remove the OE plastic dust cover in front of fuel tank.
2. Mount Insert Nut M10x65/20 into the hole (A) and mount Bracket 1 on it using Bolt M10x25.
3. Loosen the standard bolts (B) and fix Bracket 2 on it.
4. Loosen the standard bolts (C) and fix the front part of skid plate on it.
5. Rear part of the skid plate fix to Bracket 2 using Bolt M8x20 (D).
6. Mount side part of skid plate to Bracket 1 using Bolt M8x20 (E).
7. Mount the OE plastic dust cover using OE hardware.
8. Tighten all screws.

Content:		
Name	QTY	Torque
Bolt M8x20	2 pcs	24.0 Nm
Bolt M10x25	1 pc	47.0 Nm
Washer 8	2 pcs	
Washer 10	1 pc	
Insert nut M10x65/20	1 pc	
Bracket 1	1 pc	
Bracket 2	1 pc	
Skid plate	1 pc	
Cap	2 pcs	