

LAND ROVER EVOQUE

No.: 3103.1 Engine + gearbox


Year: 2011-

Engine: All

Transmission: All

FITTING KIT

1. Bolt M8x40.....	1 pc
2. Bolt M10x30.....	6 pc
3. Washer 8.....	1 pc
4. Washer 10.....	6 pc
5. Insert nut M8x50.....	1 pc
6. Insert nut M10.....	5 pc
7. Insert nut M10x65/20.....	1 pc
8. Spacer 14mm.....	1 pc

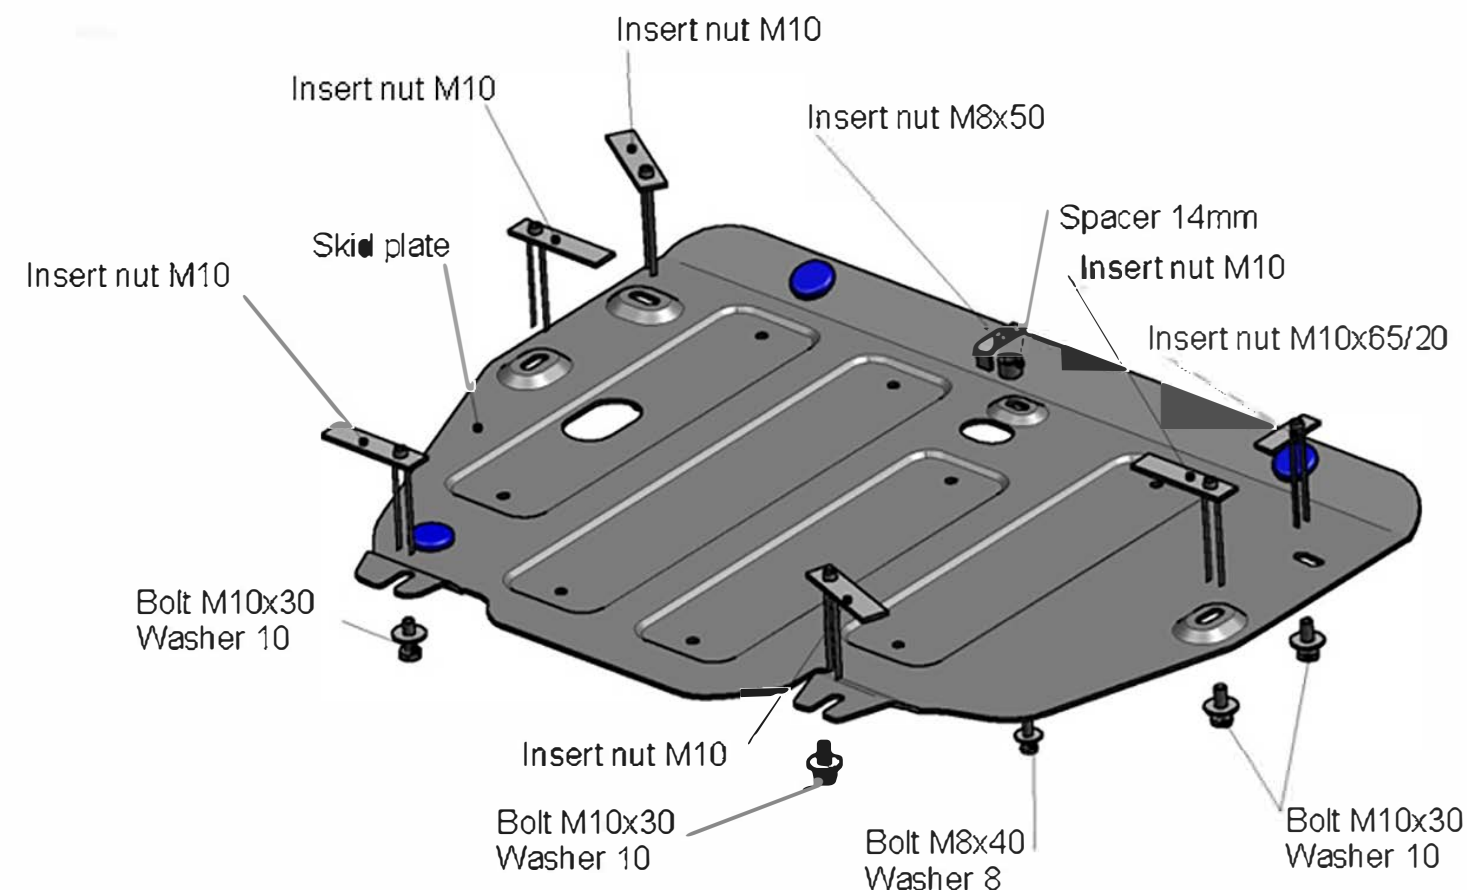

INSTALLATION INSTRUCTIONS

1. Remove factory plastic guard.
2. Place insert nuts M10 above original hole in rear end of underframe, then screw bolt M10x30 into them.
3. Place one insert nut M10 above original hole in right front part of underframe, then place two insert nuts M10 above aperture in rear end of underframe. Screw bolts M10x30 into them.
4. Place insert nut M10x65/20 above aperture in front right part of underframe.
5. Place rear end of skid plate on mounted bolts M10x30, then fix its front end to mounted insert nuts with bolts M10x30.
6. Fix front end of skid plate to insert nut M8x50 with bolt M8x40 trough spacer 14 mm.
7. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.