

LAND ROVER DEFENDER 110

No.: 3111.1/6 Gearbox
3112.1/6 Transfer case

Year: 2005-


Engine: All

Transmission: All

FITTING KIT

1. Bolt M10x30.....	6 pc
2. Bolt M10x80.....	4 pc
3. Washer 10.....	10 pc
4. Insert nut M10.....	4 pc
5. Bracket.....	2 pc
6. Brad.....	2 pc

*For more info about compatibility with other models
please see the sticker on the skid plate

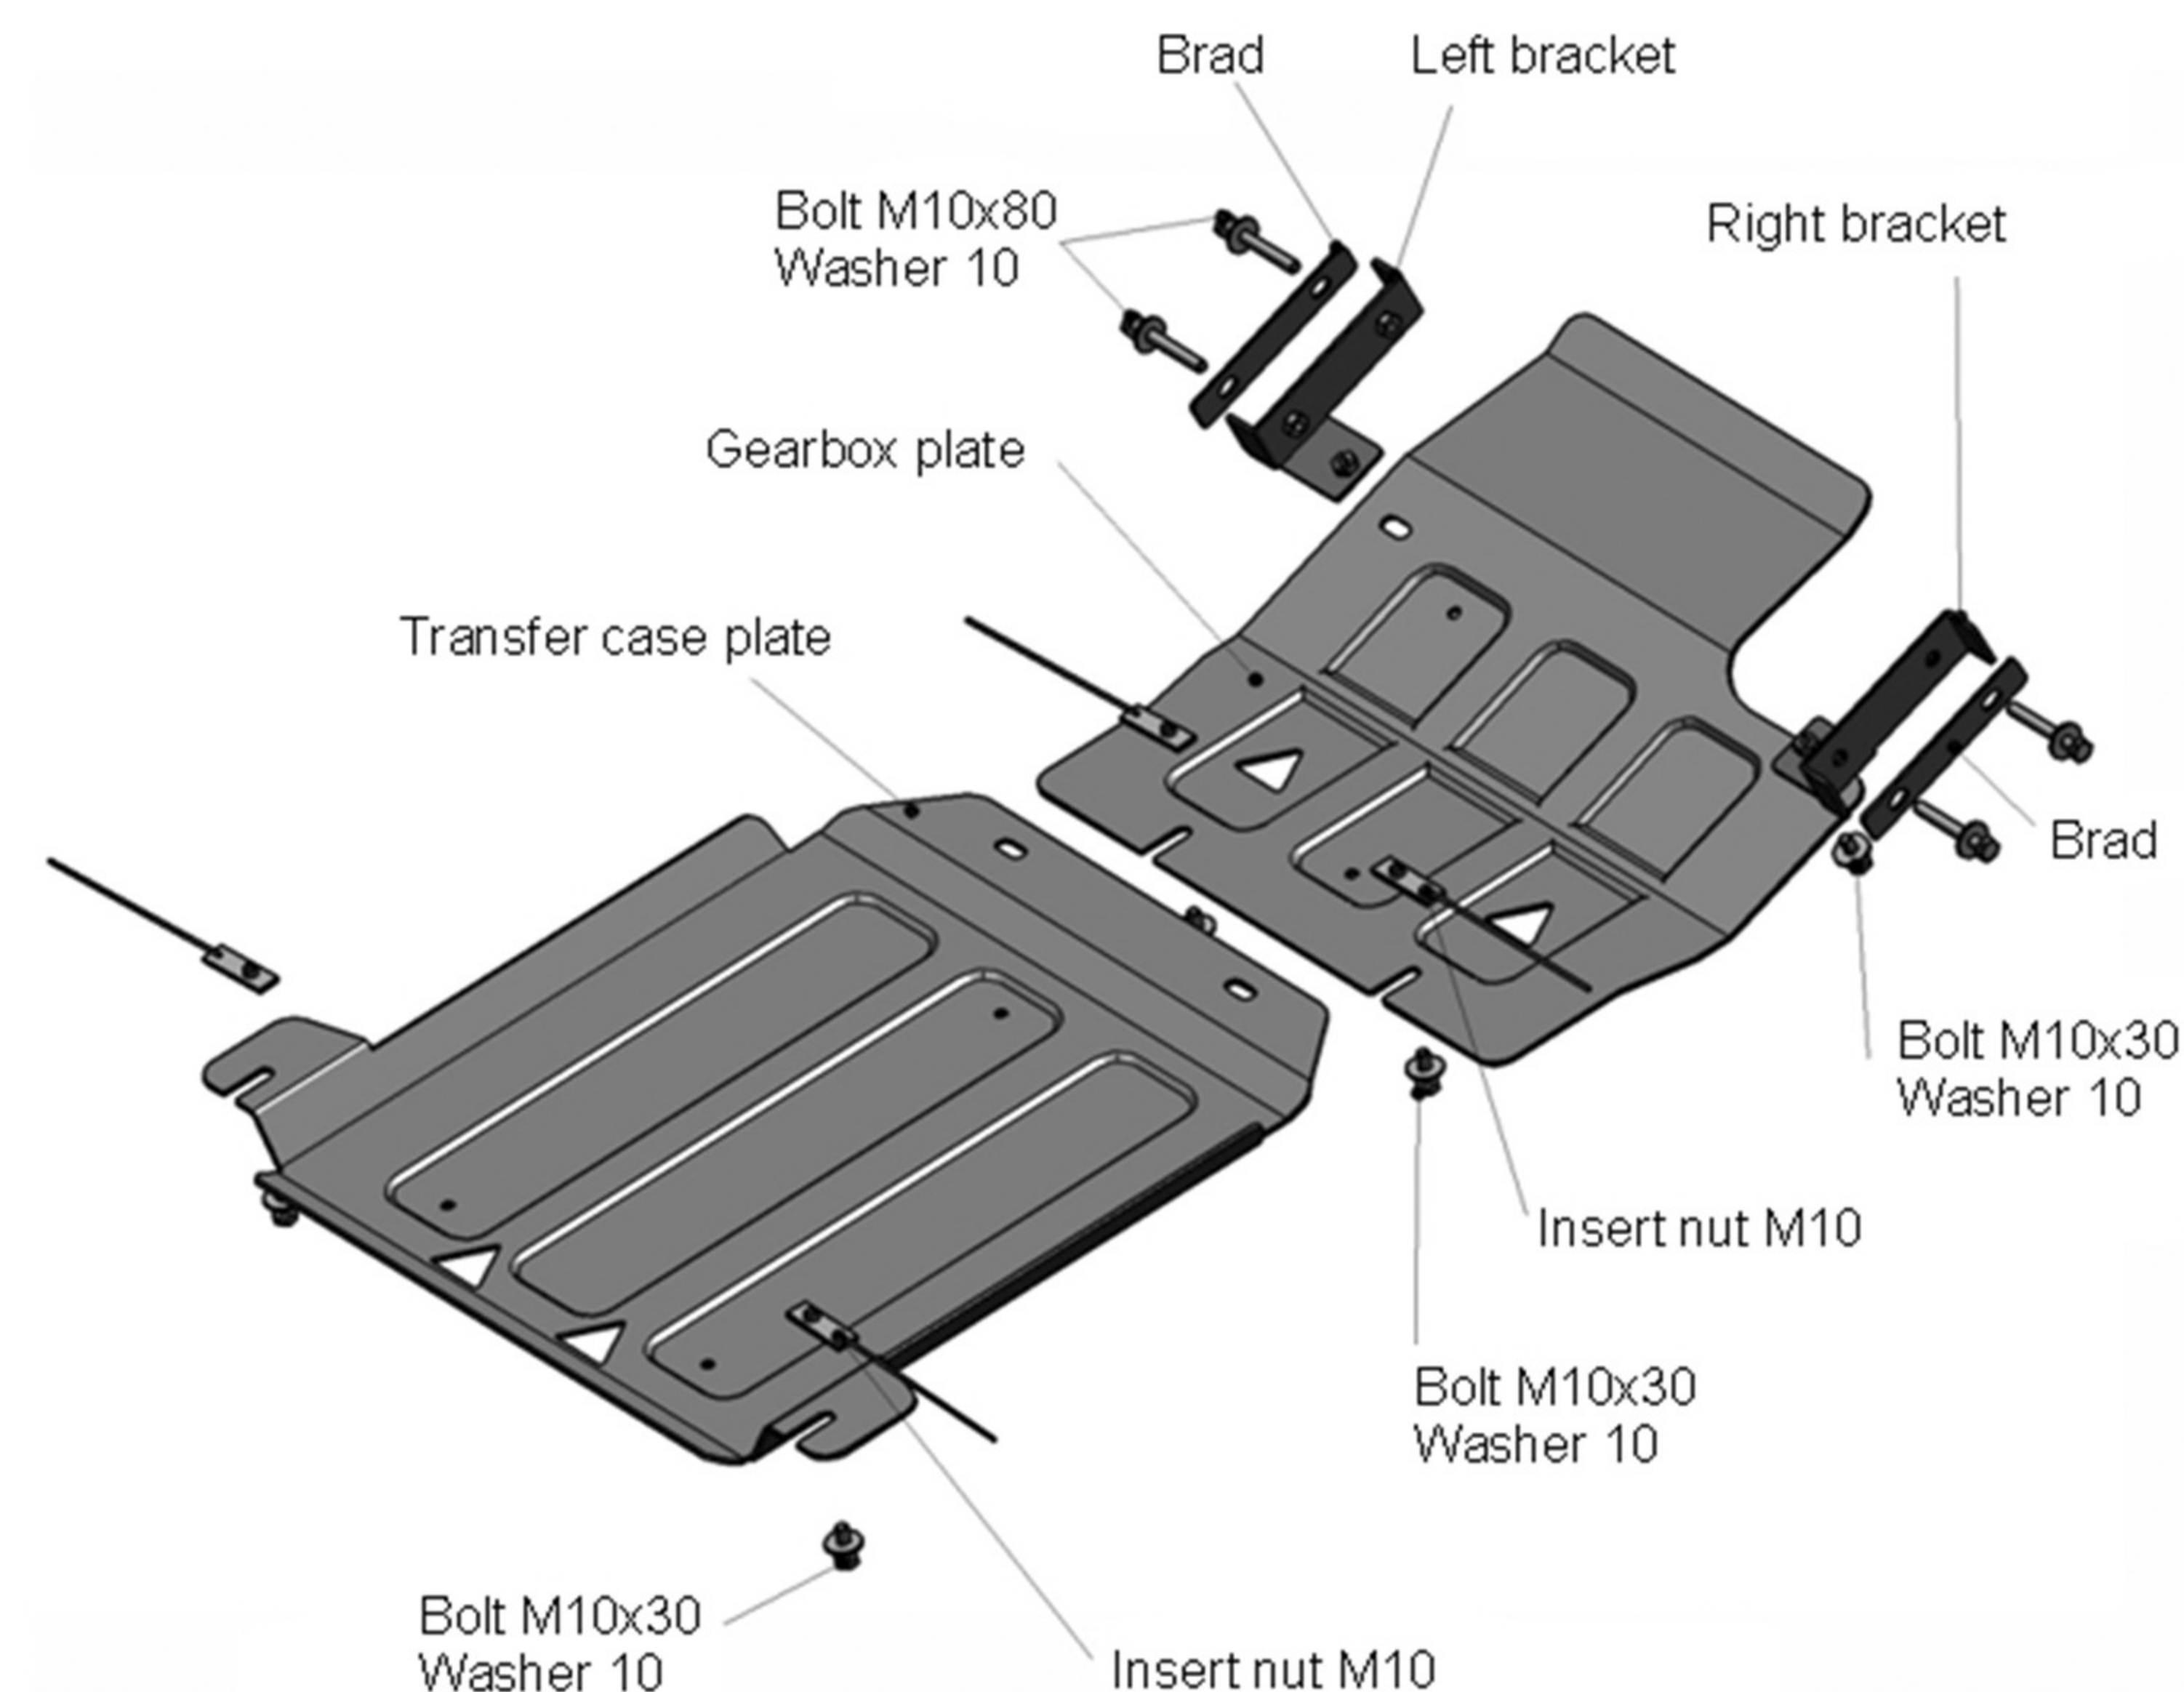

INSTALLATION INSTRUCTIONS

1. Place insert nuts M10 into apertures of underframe, then screw bolts M10x30 into them.
2. Place insert nuts M10 into apertures of cross bar.
3. Put rear end of transfer case plate on mounted bolts M10x30, then fix its front end to mounted insert nuts.
4. Fix left and right brackets to stabilizer brackets with bolts M10x80.
5. Put rear end of gearbox plate under transfer case plate, then fix its front end to mounted brackets with bolts M10x30.
6. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.