
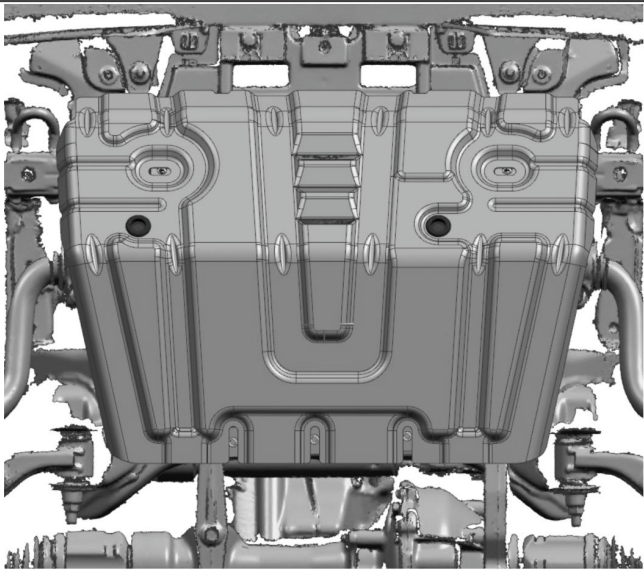
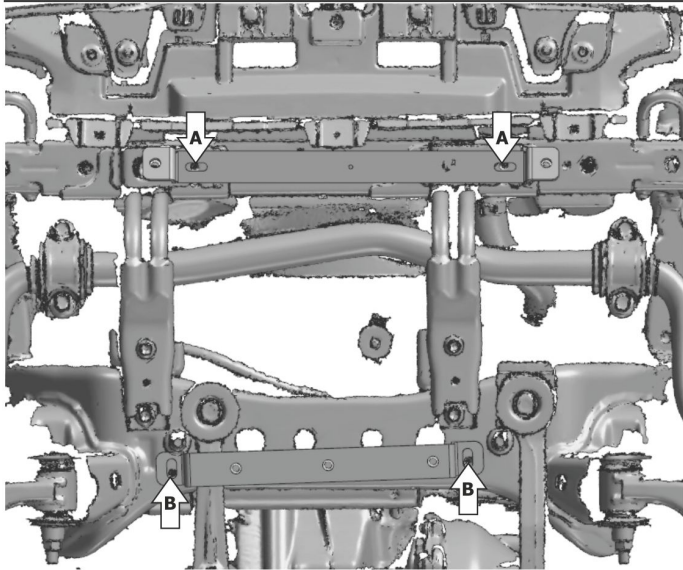


Brand	Model	Year	Engine	Gearbox	Drive
TOYOTA	LAND CRUISER 150 PRADO	2009-2017 2017-	2.7; 2.8TD; 3.0TD; 4.0 2.7; 4.0	Manual; Auto	AWD
LEXUS	GX460	2009-2013; 2013-	4.6	Auto	AWD

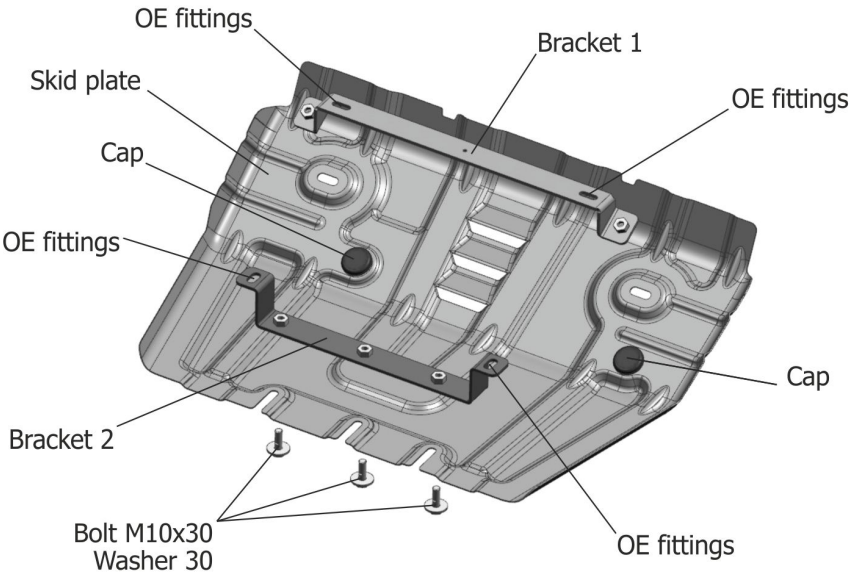

Installation Instructions:

- 1. Remove OE skid plate.
- 2. Mount Bracket 1 on holes (A) using OE fittings.
- 3. Mount Bracket 2 on holes (B) using OE fittings.
- 4. Screw in bolts M10x30 in to Bracket 2 for a few turns.
- 5. Mount rear part of skid plate on installed bolts M10x30, front part of skid plate mount on bracket 1 using bolts M10x30.
- 6. Tighten all screws with required torque.

Content:		
Name	QTY	Torque
Bolt M10x30	5 pcs.	47.0 Nm
Washer M10	5 pcs.	
Bracket 1	1 pc.	
Bracket 2	1 pc.	
Skid Plate	1 pcs.	
Cap	2 pcs.	