
Fitting Southdown Discovery 2 Front Steering Guard

1] Remove The Valance Support Tube From Vehicle

2] Driver Side

Offer Holes 'A' Upto The Lower Bumper Mounting Bolt
Offer Holes 'B' Upto The Steering Box Mounting Bolt
Replace Bolts And Tighten Loosely

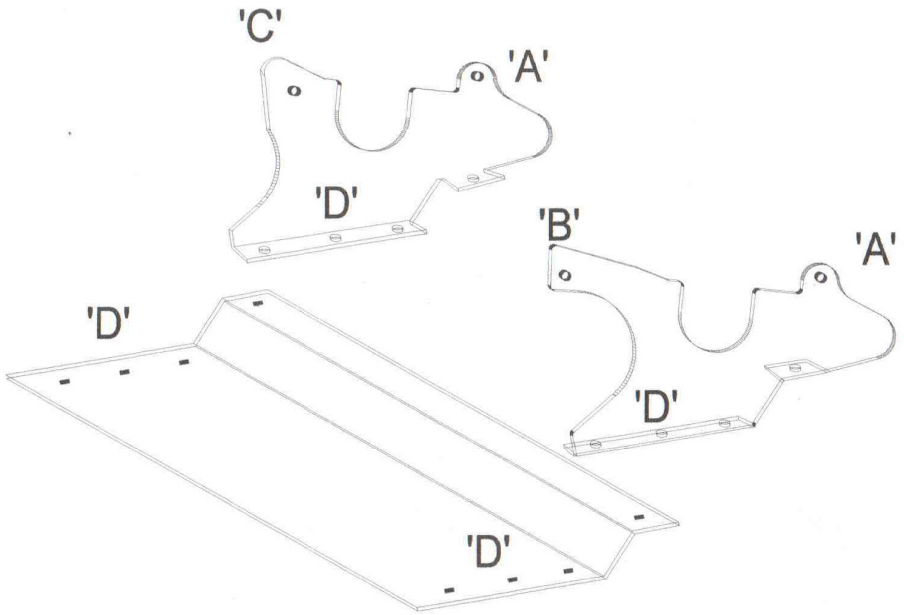

3] Off Side

Offer Holes 'A' Upto The Lower Bumper Mounting Bolt
Replace Bolts And Tighten Loosely

4] Offer Protective Plate Up To Bolt Holes ' D'
Insert And Loosely Tighten Socket Buttton Head Set
Set Screws Provided

5] Off Side

On Early Models Align Bolt Hole 'C' With Hole In Chassis
Or On Later Models Align And Drill 12mm Hole In Top Of
Steering Damper Mounting Bracket And Secure Using 12mm
Socket Button Provided. Place Screw Head On The Inside Off
Damper Mounting To Allow Maximum Clearance

6] Re-Tighten All Bolts And Secure Valance To Leading Edge Of Steering Guard